


# INSTALLATION INSTRUCTIONS (2-1/16") ELECTRICAL GAUGES

WATER RESISTANT OFF ROAD/MARINE

**BACK VIEW**

## Oil Pressure Gauges.

1. Disconnect negative (-) battery cable.
2. Install 1/8" NPT sender (Included)
3. Route an 18-gauge wire from the "G" terminal on the sender to the "S" terminal on the back of the gauge.  
**Caution: Be careful not to touch ignition (12v) wire to the sender "S" terminal on the back of the gauge or the sender may be damaged.**
4. Connect wire from the sender ground (-) to any chassis ground.
5. Connect wire from a 12v accessory power to the positive (+) on the back of the gauge.
6. Reconnect negative (-) battery cable.

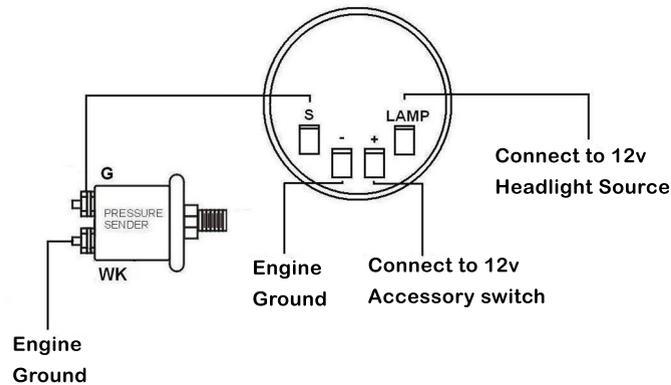

## WATER / OIL Temperature Gauges

**BACK VIEW**

1. Disconnect negative (-) battery cable.
2. Install 1/8" NPT sender (Included)
3. Route an 18-gauge wire from the white wire on the sender to the "S" terminal on the back of the gauge.  
**Caution: Be careful not to touch ignition (12v) wire to the sender "S" terminal on the back of the gauge or the sender may be damaged.**
4. Connect wire from the sender ground (-) to any chassis ground.
5. Connect wire from a 12v accessory power to the positive (+) on the back of the gauge.
6. Reconnect negative (-) battery cable.

