

Product Name: BOV Kompact Shortie Plumb
 Back Mercedes A45 AMG
 Product Description: 2.0L Mercedes A45 AMG BOV
 Product Number: TS-0203-1X62



IMPORTANT NOTES:

- Please thoroughly read and understand these instructions before commencing this installation.
- The thread on the cap for the vacuum source is AN-3. The standard swivel nipple can be changed to an AN-3 fitting if desired.
- Ensure that the engine is cold before installing this product.

RECOMMENDATIONS


- **Turbosmart recommends that your Blow off valve (BOV) is fitted by an appropriately qualified technician**

Please check that the following items have been provided in your kit

Quantity	Description	Use
1	Model specific BOV	Replace standard BOV blanking plate
1	1/16 th NPT FPR nipple	Provide devices such as boost gauges with vacuum/pressure source
1	5mm Black vacuum hose	Connect BOV to pressure/vacuum source
1	1/16 th NPT Blank	Port blank for boost reference adapter
1	1/16 th NPT WG nipple	Provide BOV with vacuum/pressure source
1	Boost reference adapter	Adapter to supply MAP signal to accessories
2	13-25mm slotted hose clamps	Secure 1/2" hose to boost reference adapter
2	6mm spring clamps	Secure 5mm vacuum hose on fittings
2	250mm cable ties	Fixing pressure lines in position
2	100mm cable ties	Fixing pressure lines in position
1	100mm of 1/2" vacuum	Attach boost reference adapter to OEM intake manifold MAP port

HOW TO INSTALL YOUR BOV

1. Remove the engine cover by pulling upwards. Pull cover from opposing corners to aid in the removal.

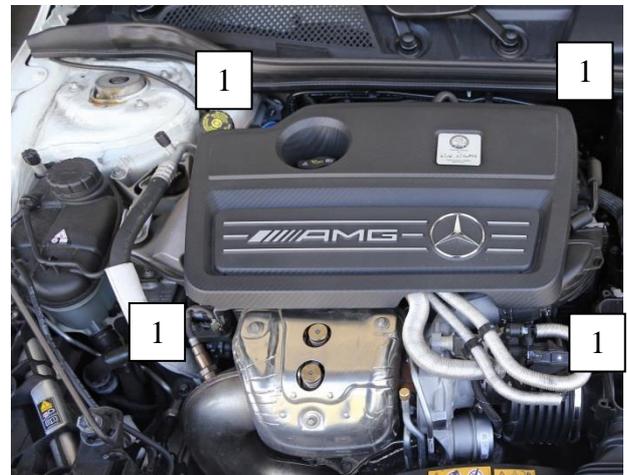


2. Locate the air intake filter housing located at the front right hand side of the end bay. Remove the air filter housing cover by undoing the four torx screws.



3. Remove the air filter by turning it towards the front of the vehicle (anticlockwise).




4. Detach the electrical connection from the air filter housing and place to one side.

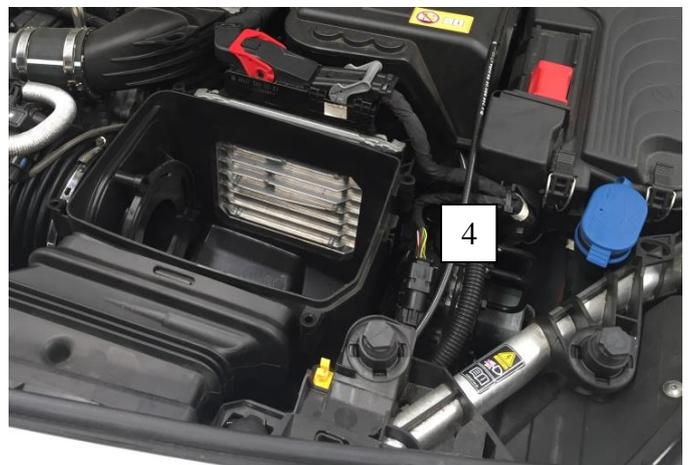


5. Unclip the ECU harness connectors from the ECU and place to one side.




6. Unplug the pressure sensor on the left hand side of the air filter housing.

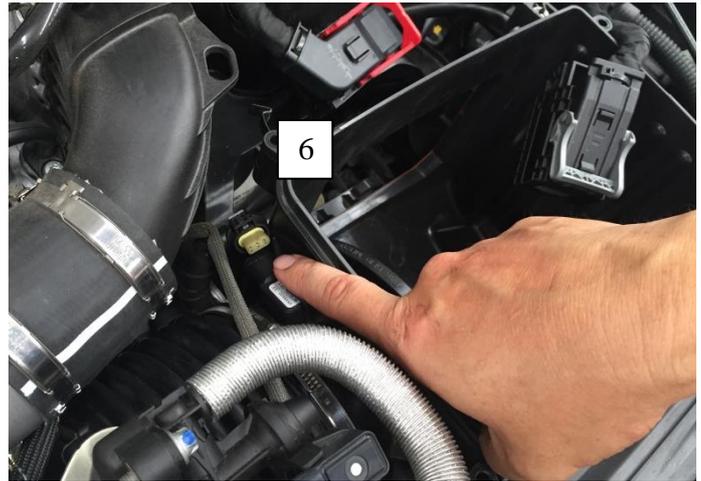

7. Remove the air filter housing by pulling upwards out of the rubber guides.

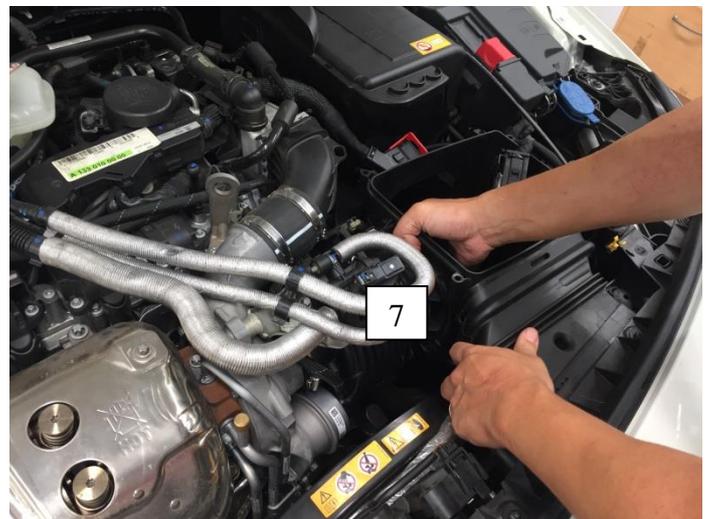

8. Remove both of the screws holding the bracket attached to the ventilation and regeneration lines.

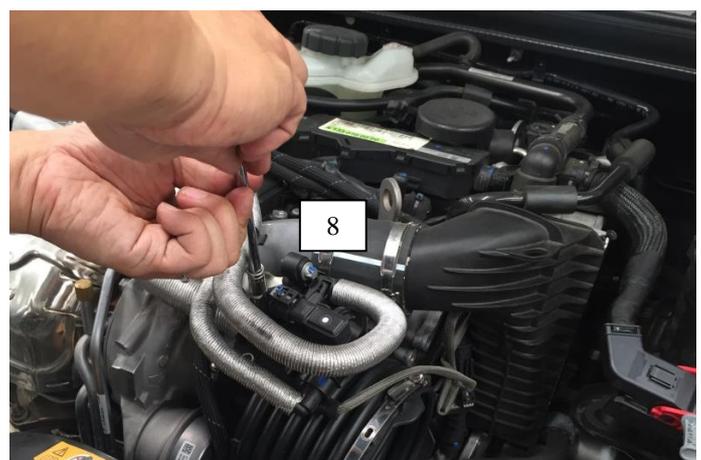


9. Remove the ventilation and regeneration hoses from the intake pipe by gently pulling upwards. Do not bend ventilation and purge line too excessively. Place hoses on one side.



10. Undo screw/bolt attaching the turbocharger compressor cover to the ventilation hoses bracket.




11. Loosen hose clamp and remove the intake muffler.

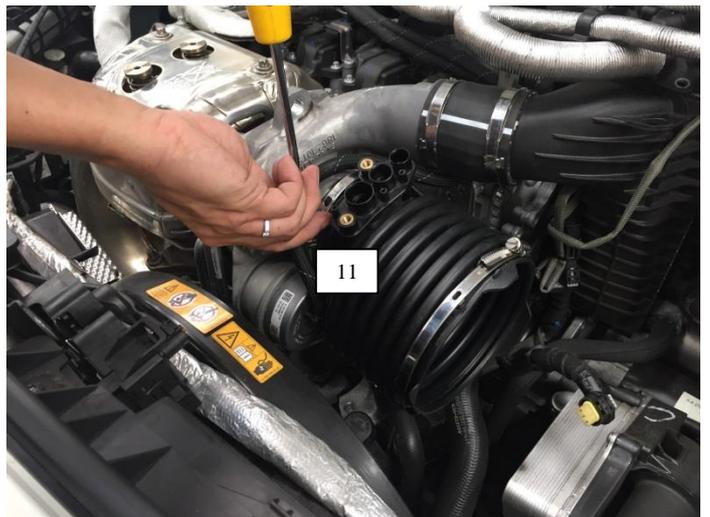


12. Locate the OEM BOV blanking plate. The BOV blanking plate is located on the compressor cover of the turbocharger




13. Remove the three bolts securing the BOV blanking plate onto the turbocharger compressor cover. Remove BOV blanking plate once all three bolts have been removed.

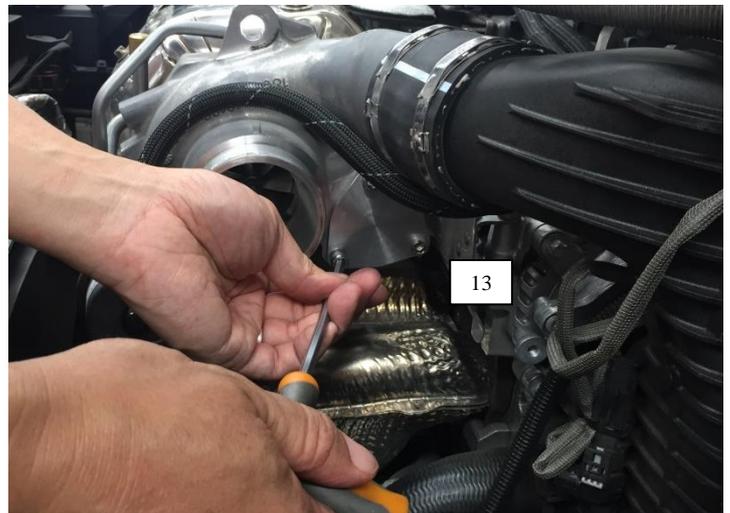

14. Install your new Turbosmart BOV in the factory location. Please note that the BOV can only be fitted in one orientation. NOTE: Ensure that the BOV flange has both O-rings in place prior to installation. Use the OEM bolts or the supplied bolts to secure BOV. **Torque to 6 Nm (4.23 ft.lbs).**

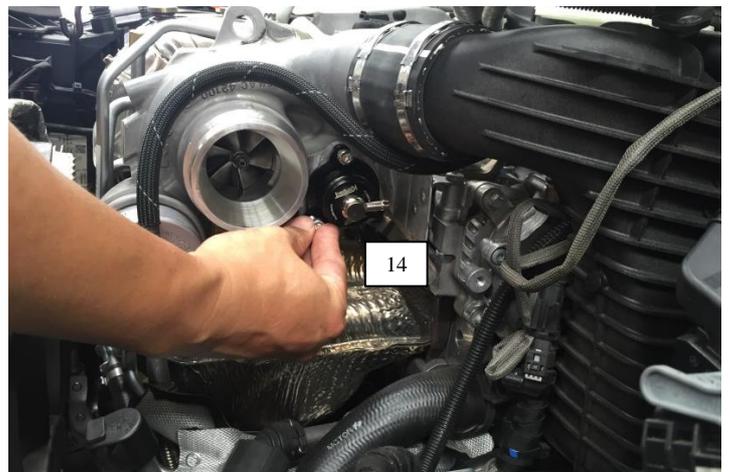

15. Locate the boost reference adapter included with the Turbosmart BOV kit. The adapter looks like the image on the right. **Please note that the barbs are not the same size.**

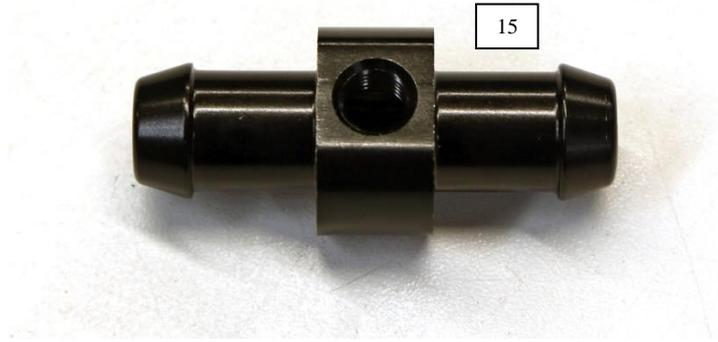


16. Install the supplied 1/2" hose on the large barb.



17. Install one of the supplied slotted hose clamps on the hose.



18. Install the supplied fittings as required. Use the larger nipple for the BOV. The smaller nipple is used for accessories such as boost gauges and boost controllers. Blank any unused ports with the provided blanking plug. Apply thread sealant as shown.

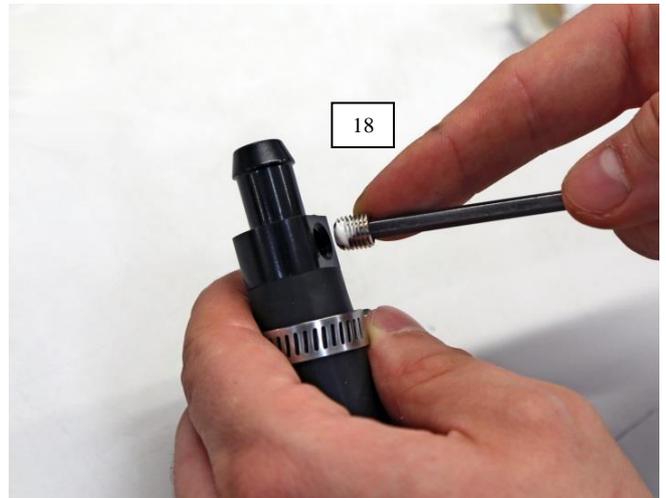


19. Locate the boost reference hose off the intake manifold. The hose can be seen when looking down firewall from the driver side.



20. Remove the factory hose off the in the intake manifold. The manifold port is shown below. Note: this is the port after factory hose has been removed.



21. Install the OEM hose onto the smaller barb side of the boost reference adapter. Use the OEM spring clamp to secure the hose onto the boost reference adapter.

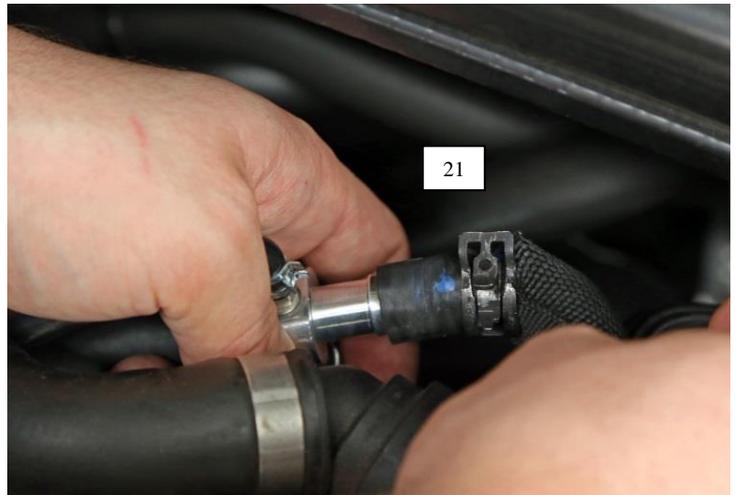

22. Install the other side of the supplied 1/2" hose onto the intake manifold. Use the second of the supplied slotted hose clamps to secure the hose onto the intake manifold barb. Do not over tighten the hose clamp.




23. Install the supplied vacuum hose onto the fittings as required. Use the supplied spring clamps to secure the vacuum hose onto the fittings.



24. Route the vacuum hose towards the BOV location. Use the supplied cable ties to secure the vacuum hose in place. Ensure that the vacuum hose is not kinked or pinched.



25. Install the other end of the vacuum hose on the BOV nipple. Use the supplied spring clamp to secure the vacuum hose on the nipple.

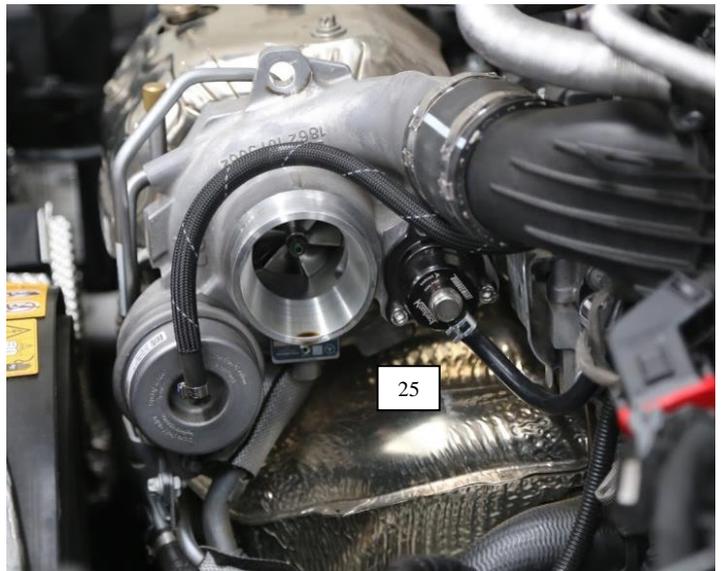

26. Reinstall the intake pipe in the reverse order.
27. Install the engine cover.
28. Start the vehicle once it is safe to do so. Check for leaks. *Consult adjusting your BOV sections for tuning.*



ADJUSTING YOUR BOV

INSTALL THE BOV WITH THE FACTORY SETTING FIRST BEFORE PERFORMING ANY ADJUSTMENT.

Adjustment to the BOV is made by rotating the cap. To increase the spring force on the piston, rotate the cap clockwise in the direction of hard as marked on the top of the cap. To decrease the spring force on the piston, rotate the cap anticlockwise in the direction of soft as marked on the top of the cap - CAUTION - Do not rotate the cap beyond the O-Ring groove.

- Start with the BOV cap at the maximum soft position (The indicator O-Ring should be completely covered by the edge of the cap)
- With the engine at idle the exhaust port should be closed off by the piston – the piston should be hard against the seat and not floating or moving
- Free rev the engine and back off quickly, the engine should return to normal idle speed – if the engine drops below idle or stalls increase the spring tension by one turn
- Repeat this process until the engine free revs and returns to normal idle speed
- Test drive the car and ensure that when decelerating or changing gears that the engine has minimal backfiring and no stalling. If backfiring is excessive or stalling is noticed then check all connections made during the installation, otherwise increase the spring tension

MAINTENANCE

Turbosmart recommends that the following maintenance procedure is carried out at six monthly intervals or at higher intervals if the environment is very dusty or wet. Regular maintenance will ensure that your BOV is operating at its peak performance and will extend the working life of the product.

- Remove the cap of the BOV by rotating in an anti-clockwise direction – CAUTION, the cap is under spring force, remove with care!
- Carefully remove the piston and thoroughly clean the piston and the bore of the BOV
- Inspect the surface of the piston and the bore of the BOV for scoring or excessive wear, silver coloured marks on the bore are an indication of excessive wear
- Check the Base O-ring and the Cap O-ring for any damage – replace if necessary
- Lubricate the bore and the piston with Uni-Glide™, hydraulic oil or sewing machine oil – DO NOT use grease or viscous oils
- Re-assemble the BOV in the reverse order

TROUBLE SHOOTING

The following points should be checked if you find that your engine is dipping below normal idle, stalling or if the BOV is functioning poorly. Please note: the following checks will cure 99% of problems experienced with a BOV.

- Check the vacuum hose for splits, cracks, loose connection, kinking or any obstruction – old or fatigued hose may collapse under vacuum causing an obstruction.
- With the engine running remove the vacuum / boost hose from the nipple in the cap of the BOV, there should a loud hissing sound. The engine should idle poorly, double check by covering the end of the hose with your finger – otherwise the hose is blocked.
- Check to see if the BOV is blocked or contaminated with dirt or debris.
- Ensure that the vacuum / boost source is not shared and that the vacuum source is directly from the inlet manifold.
- Check the seal between the compressor cover flange and the BOV. Make sure the supplied O-Rings are installed properly and the BOV Flange is secured on the compressor cover flange with the 3 supplied screws.
- Ensure the spring clamps are secured on silicon hoses and fittings.
- If the valve does not open properly or is slow to react, it could be due to the mapping of the drive by wire system from such things as aftermarket chips and engine tunes. Check with the tuner that the mapping of the throttle is the same as OEM.
- The valve may not open if the engine is just free revved. This is due to the drive by wire system. Check that the valve operates by driving the vehicle.

ONE YEAR LIMITED WARRANTY

Turbosmart is a company built on Customer Satisfaction and Service. That is why all of our products go through regimented test procedures before they are packaged and shipped. Turbosmart stands behind its products for one full year after purchase. Terms of Warranty, Service and Returns are as follows:

Limited Warranty: Turbosmart warrants its products to be free from defects in material and workmanship under normal use and if properly installed for a period of one year from date of purchase. If found to be defective, it will be replaced or repaired if returned prepaid along with proof of date of purchase. This shall constitute the sole remedy of the purchaser and the sole liability of Turbosmart to the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Turbosmart be liable for special or consequential damages. This warranty is only valid on products purchased from Turbosmart Authorized Dealers.

Service: After the warranty period has expired, repair service is charged based on a minimum and maximum charge rate. (Contact Customer Service for current rate).

Returns: When returning a Turbosmart product for repair, it must be accompanied by a completed Customer Warranty Form and RMA number. To access this form please go to our website www.turbosmartonline.com and you will find it on the Downloads page.

THE TURBOSMART PLEDGE

DO NOT USE ANY TURBOSMART PRODUCT UNTIL YOU HAVE CAREFULLY READ AND UNDERSTOOD THE FOLLOWING AGREEMENT. Please call if you have any questions or do not understand this agreement. Refer to our brochure, website or catalogue for terms and conditions and further information regarding your product. Turbosmart appreciates your business and pride ourselves on our customer service. We are always happy to offer you advice and will provide you with help in any way we can. The purpose of this agreement is to avoid any problems or hard feelings.

We sometimes make mistakes, as do our dealers, distributors and suppliers. Even customers can sometimes order the wrong parts. Do not use, modify, install, trial assemble, nick, drop, scratch or adjust any part until you first check for any damage. Damage must be reported immediately. NO EXCEPTIONS. If there are any components missing please contact your authorized reseller immediately upon receipt of your shipment. Missing components must be reported within five (5) business days of receipt. Parts returned for any reason MUST BE IN RESALABLE CONDITION. It is YOUR responsibility, "THE CUSTOMER" to carefully package any returns to avoid shipping damage. Insurance is highly recommended. Credit cannot be issued for damaged goods.

Warranty as to Defects – Australian Consumer Law

- 1.1 We warrant for a period of twelve (12) months from the date of supply of the Goods and/or Services that if due to the fault of Turbosmart the Goods and/or Services (as the case may be) provided by Us are defective then We will, as determined by Us do one or more of the following:
 1. In the case of Goods; the replacement of the Goods, the supply of equivalent Goods, the repair of the Goods, the payment of the cost of replacing the Goods or of acquiring equivalent Goods, or the payment of having the Goods repaired; or
 2. In the case of Services; the supplying of the Services again, or the payment of the cost of having the Services supplied again.
- 1.2 You will only be entitled to the benefit of the warranty set out in this pledge, if You have not wholly or partially caused or contributed to the defect to the Goods by the misuse of the Goods or the failure to use the Goods in accordance with any specifications or instructions applicable to the Goods.
- 1.3 The warranty contained in this pledge is provided by Turbosmart Pty Limited of 32 Milton Street North, Ashfield NSW 2131, Australia, Telephone: +(61) 1300 735 506, Email: sales@turbosmart.com.au.
- 1.4 In order for a You to make a claim on the warranty You must within twelve (12) months of delivery of the Goods or Services give written notice to Us at the address specified in clause 1.3 above of the details of any defects in respect thereof. Any Goods referred to in a notice given pursuant to this clause should be left in the state and condition in which they were delivered until such time as We or Our duly authorised agent have inspected the Goods with such inspection to be carried out within a reasonable time after service of such notice. If the Goods are not so left in the state and condition in which they were delivered then the You shall be deemed to have accepted the Goods and the warranty contained in this pledge shall not apply.
- 1.5 You shall be responsible for all expenses associated with making a warranty claim under this pledge however if the Goods and/or Services are found to be defective due to Our fault then We shall reimburse You for any expenses incurred by You in making a warranty claim upon receiving evidence satisfactory to Turbosmart to support such expenditure.
- 1.6 The benefits to You given by the warranty contained in this pledge are in addition to other rights and remedies of You have under a law in relation to the Goods or Services to which the warranty relates. In accordance with the Australian Consumer Law We makes the following statement: "Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

EXCEPT AS PROVIDED BY LAW, THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY, WHICH APPLIES TO TURBOSMART PRODUCT AS EXPRESSLY GIVEN IN LIEU OF ANY OTHER WARRANTY EXPRESSED OR IMPLIED, INCLUDING THAT OF MERCHANTABILITY. ANY IMPLIED WARRANTY INCLUDING THAT OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE IS HEREBY LIMITED BY THE SAME TERMS AND TIME LIMITATIONS SET FORTH IN THIS LIMITED EXPRESS WARRANTY AND OTHERWISE EXCLUDED.

EXCEPT FOR THOSE OBLIGATIONS ASSUMED HEREIN, TURBOSMART ASSUMES NO OTHER OBLIGATIONS IN CONNECTION WITH THE SALE OF ITS PRODUCTS.

IN THE EVENT THAT THE INDIVIDUAL PURCHASER DOES NOT AGREE WITH THIS AGREEMENT THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UN-USED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN SEVEN (7) DAYS FROM THE DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE INDIVIDUAL PURCHASER HAS READ AND UNDERSTOOD THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Happy motoring!
The Turbosmart Team

Turbosmart Pty Limited P.O. Box 264 Croydon, NSW 2132 Australia ABN: 69 081 069 794
Ph: +61 1300 735 506 Fax: +61 1300 735 509 Email: instructions@turbosmart.com.au
www.turbosmartonline.com