9-201/301-0847 Evo 8/9 Fuel Pump Installation Guide






Parts List:

- DW200/300, 9-201/9-301
- Fuel Sock
- 3-100 O-Rings (x2)
- Fuel Sock Retainer Clip
- Super Lube



Evo 8/9 Fuel Pump Install

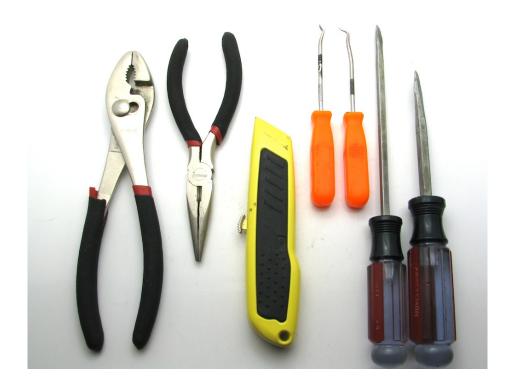









1 – unclip the 3 tabs for the fuel pump retaining cap

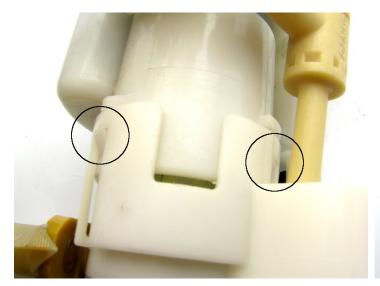





2 – unplug the stock fuel pump using a flat-head screw driver by pressing the tab in and twisting

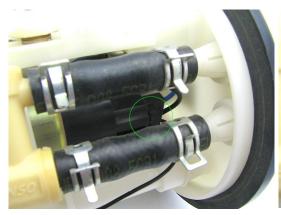





3- pull the stock fuel pump out of the assembly and remove these parts, they will be installed on the DW200/300



4 - prep DW200/300







4a - if the OE grommet for the pump outlet is not in useable condition, the o-rings supplied in kit 9-0847 may be used

5 – install DW200/300 into the pump assembly while connecting the electrical connector and snapping the pump retainer in place



- 6 after the assembly is installed into the fuel tank, connect the electrical connector to the assembly
- 7 install a length of hose to the outlet of the pump assembly allowing it to drain into a fuel safe container
- 8 crank the engine for a period of time long enough to prime the pump assembly and evacuate the air introduced during the pump installation process
- 9 attach supply line to the outlet of the pump assembly

