



INSTALLATION GUIDE

CTS TURBO B8 CATCH CAN KIT
CTS-CC-B8



20630 Mufford Crescent, Unit #309
Langley, British Columbia V2Y 2V9

www.CTSTURBO.com

WHAT IS INCLUDED

1. PCV Breather Plate
2. Catch Can
3. Mounting Brackets
4. Hardware
5. Braided Lines
6. Intake Manifold Block-off Plug

NOTES

Vehicle used in this guide is a 2013 AUDI A4 B8 Other cars will follow the same steps.

Always make sure the car is safe to work on. Do not work on a hot motor.

STEP 1

Remove engine cover.




STEP 2

Disconnect the PCV breather line




STEP 3

Remove the 2 coil packs near the breather plate.

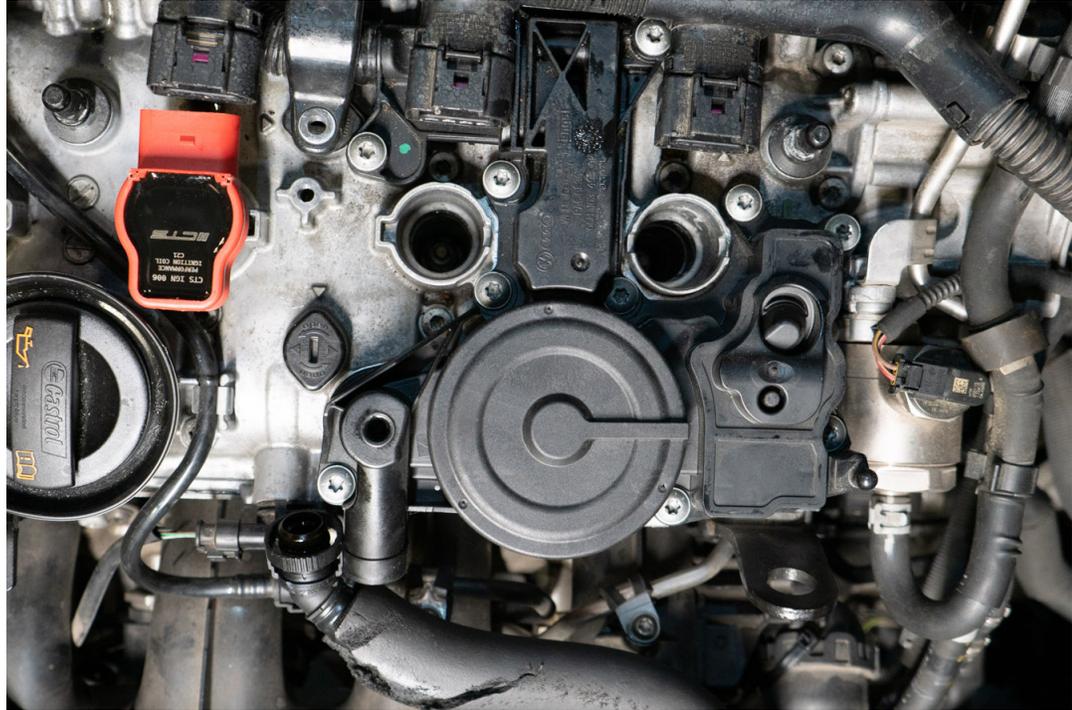

STEP 4

Remove all the bolts indicated.

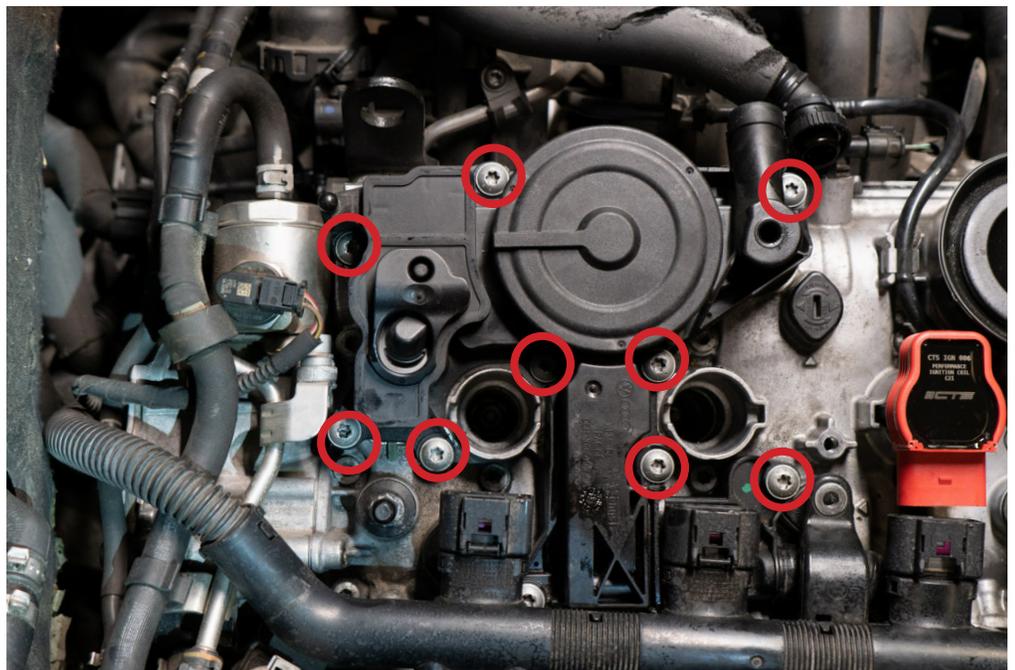


STEP 5

Remove the rear PCV breather hose.



STEP 6

Remove the OEM breather plate

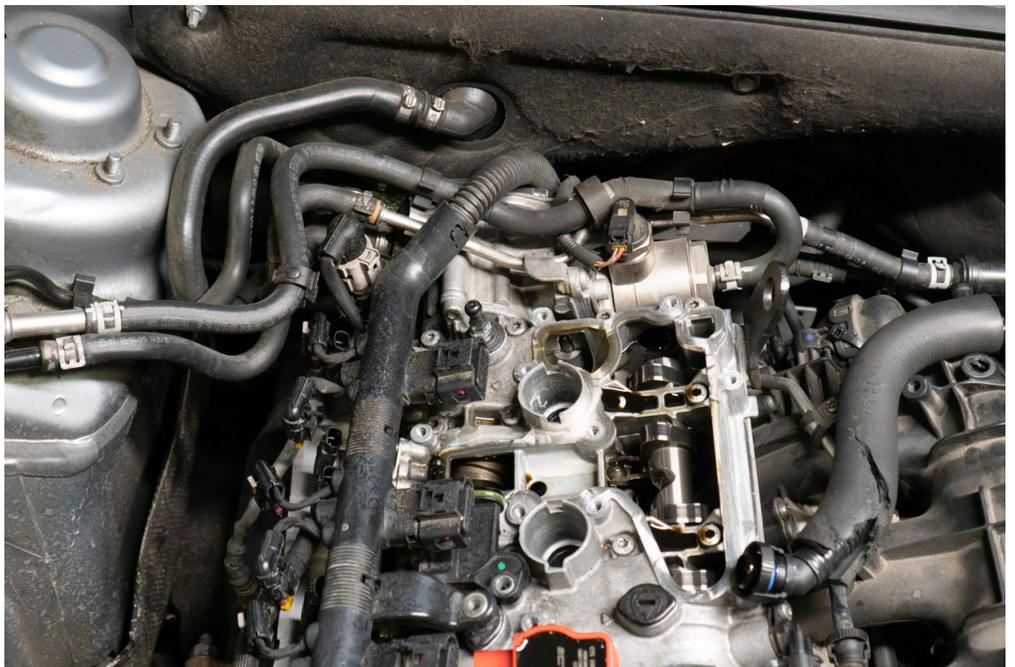


STEP 7

Transfer oring gasket to CTS breather plate.



STEP 8

Install CTS breather plate, with the provided bolts. You must also reinstall the rear PCV breather hose.

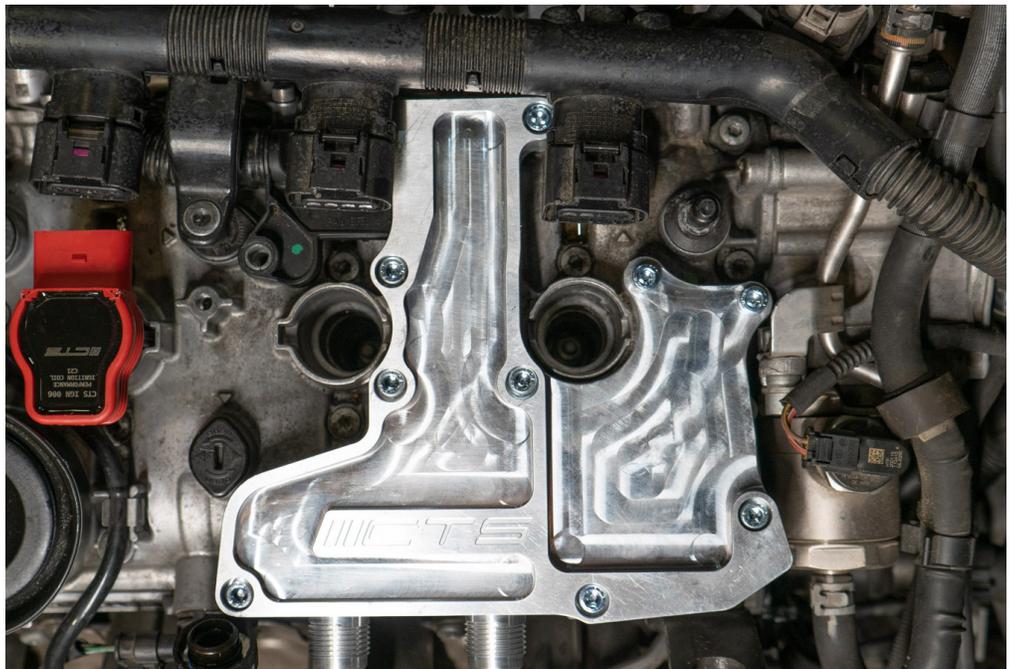

STEP 9

Secure all the bolts.

**STEP 10**

Install catch can with provided bracket and hardware.



STEP 11

Secure all the bolts.

**STEP 12**

Install provided catch can lines.



STEP 13

Install intake manifold block-off plug



STEP 14

Reinstall the coilpacks and you are done.



