



## **INSTALLATION GUIDE**

**CTS Turbo MK6 GTI 3" Catback  
CTS-EXH-CB-0002**



**20630 Mufford Crescent, Unit #309  
Langley, British Columbia V2Y 2V9**

[www.CTSTURBO.com](http://www.CTSTURBO.com)

**PARTS INCLUDED**

1. Front muffler assembly
2. Rear muffler assembly
3. Left and right exhaust tips
4. Muffler clamps x 3

**TOOLS REQUIRED**


1. 3/8" Drive Ratchet
2. 3/8" Drive Extension
3. 13mm socket
4. Exhaust Hanger removal pliers

**NOTES**

Vehicle used in this guide is a 2014 VW GTI. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

**STEP 1**

Begin by removing the bracket indicated with a 13mm socket.

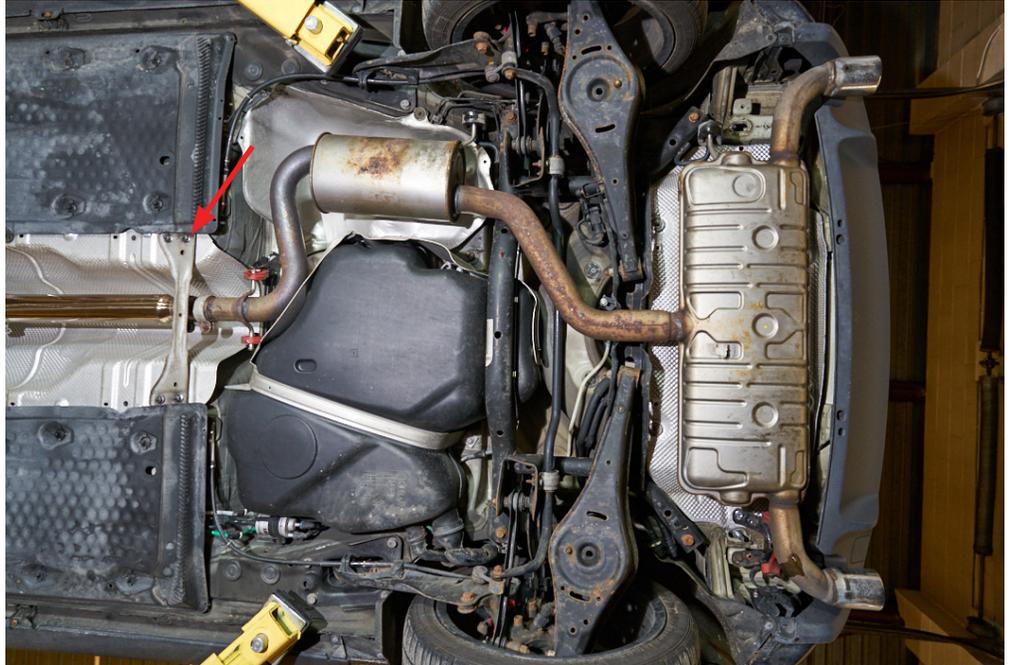**STEP 2**

Loosen the clamps on the stock catback with a 13mm socket.




**STEP 3**

Enlist the help of another person or use a muffler stand to support the stock catback.


**STEP 4**

Remove the rear right hanger from the passenger side of the rear muffler assembly.

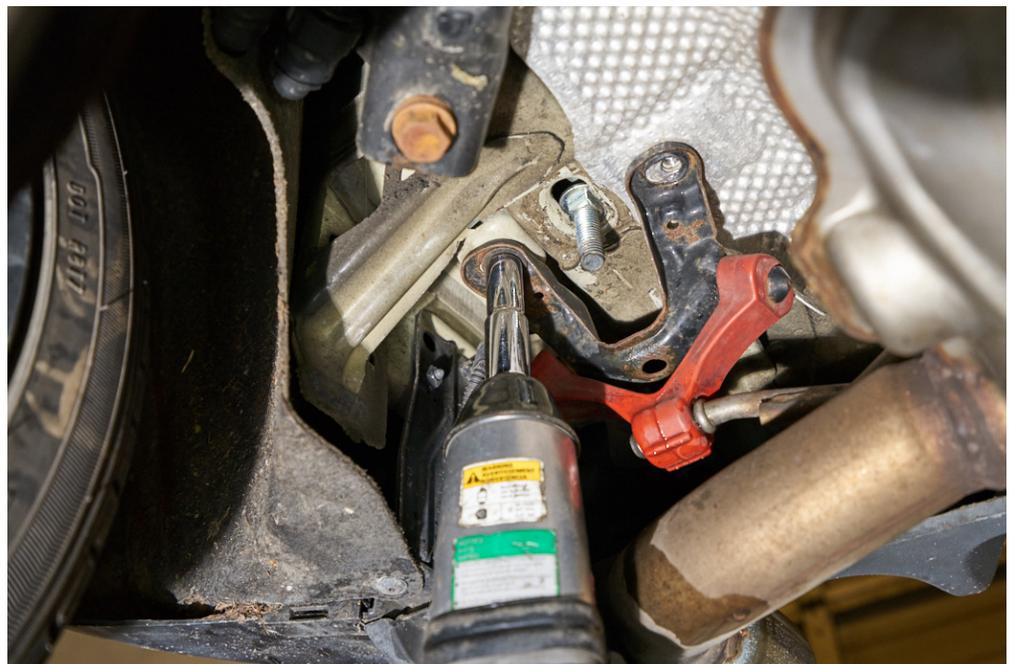

**STEP 5**

Slide the hangars out of the rubber isolators using a hangar removal tool and remove the stock catback from the car.

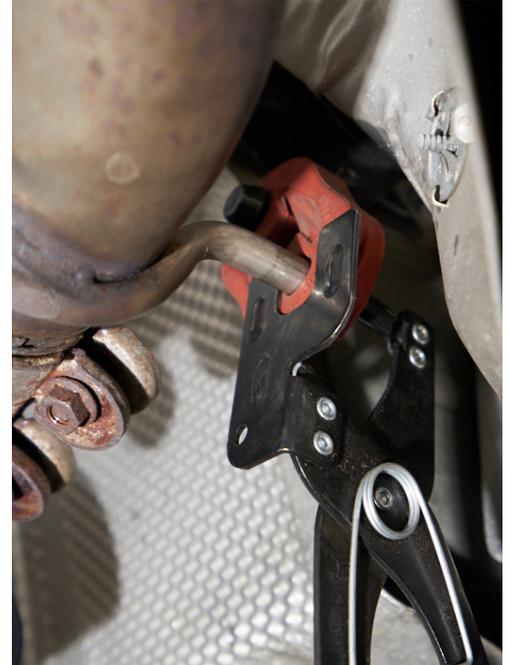
**STEP 6**

Layout the CTS Catback to prepare for installation




**STEP 7**

Install the front muffler assembly.

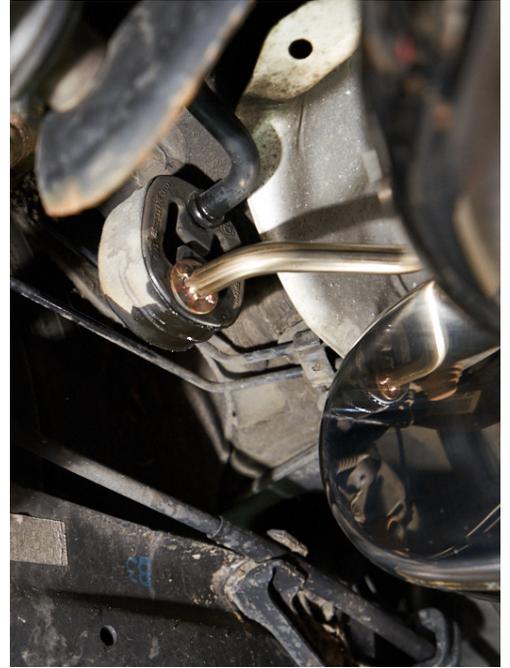**STEP 8**

Transfer the rear right hanger from the rear muffler assembly to the new catback

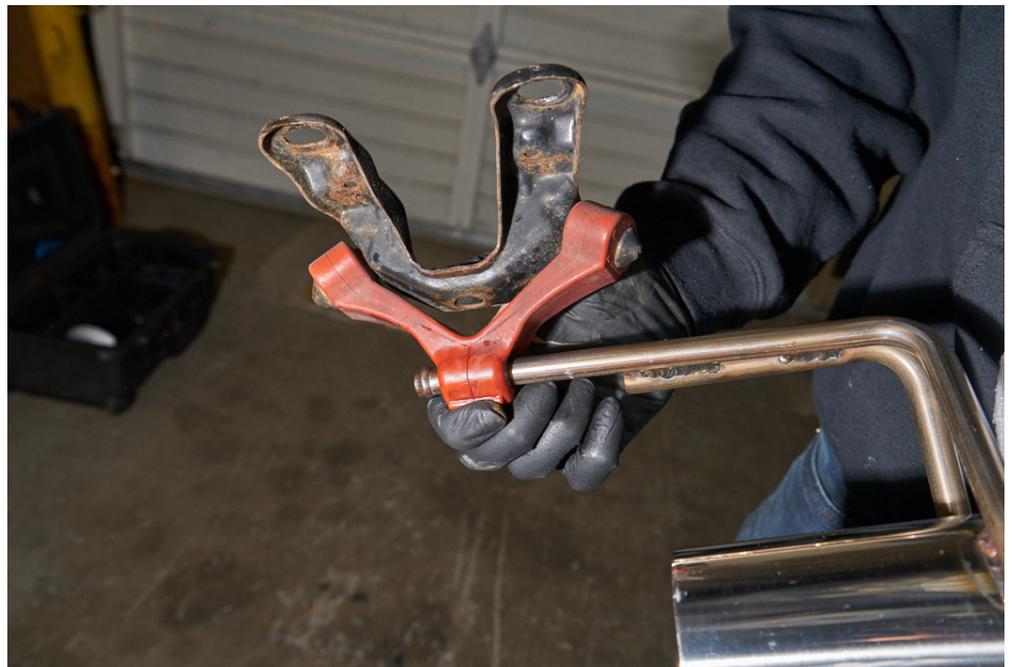


**STEP 9**

Connect the front and rear muffler assemblies.

**STEP 10**

Insert the rear muffler into the driver's side hanger and reinstall the rear passenger's side hanger using a 13mm socket.

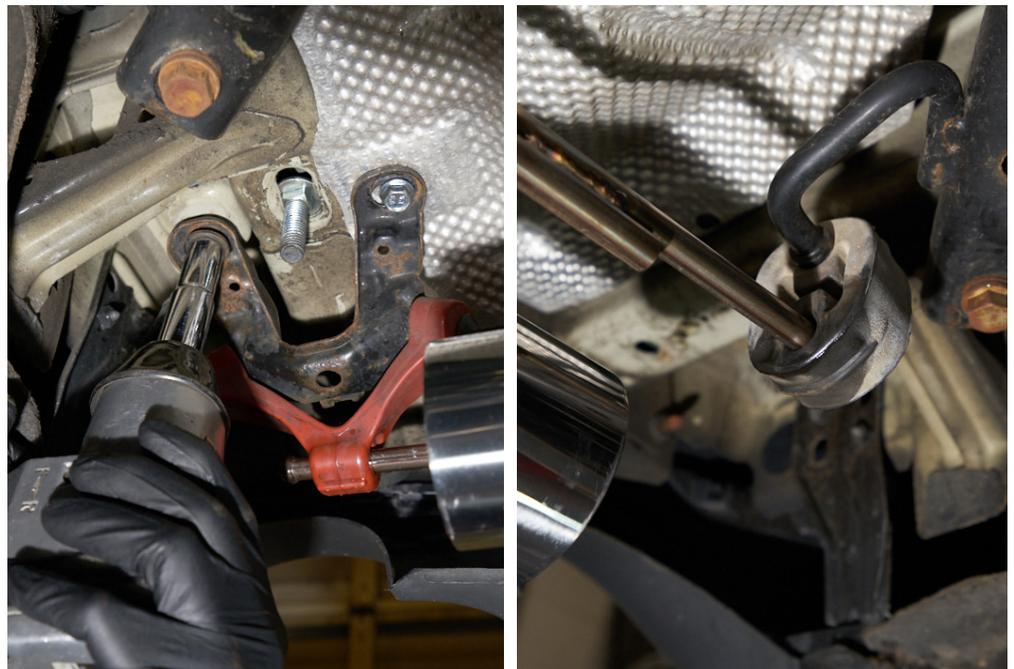

**STEP 11**

Connect the two muffler tips to the rear muffler.

**STEP 12**

Adjust the piping as required and tighten down all the clamps.



**STEP 13**

Reinstall the cross brace.

**STEP 14**

Start the vehicle and check for any leaks. If any are found, readjust and tighten the clamps.

You are done!

