



## INSTALLATION GUIDE

8V/8S Audi RS3/TTRS  
BRAKE MASTER CYLINDER BRACE



20630 Mufford Crescent, Unit #309  
Langley, British Columbia V2Y 2V9

## WHAT IS INCLUDED

1. CTS brace
2. Hardware



## NOTES

Vehicle used in this guide is a 2018 Audi RS3. Always make sure the car is safe to work on. Do not work on the car until it has cooled down. We do not accept any liability for incorrect installation or damage during the install.


## STEP 1

Remove the air intake.



## STEP 2

1. Remove the OE trox screw

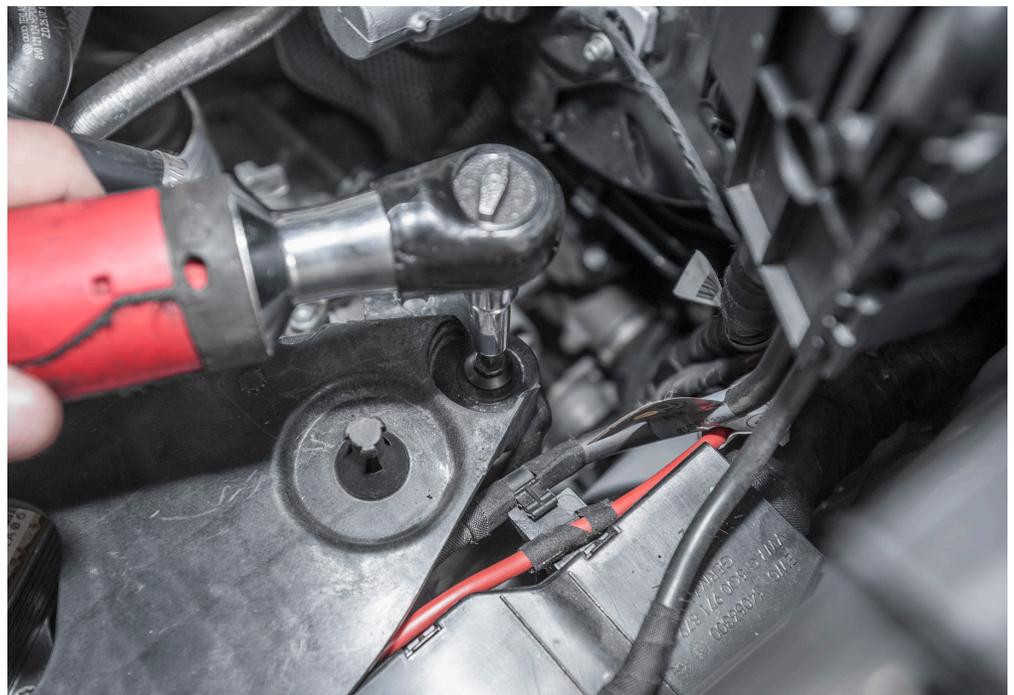

## STEP 3

Install the brake master cylinder brace.

