

# Install Throttle Pipe



604.530.3092

[www.ctsturbo.com](http://www.ctsturbo.com)

#309-20630 Mufford Cre. Langley

**Step 1** - Remove the belly pan T25



**Step 2** - Loosen silicon from the pipe 7mm




**Step 3** - Remove silicon



**Step 4 - Unclip the coolant hose**



**Step 5 - Undo undo both brackets T30**

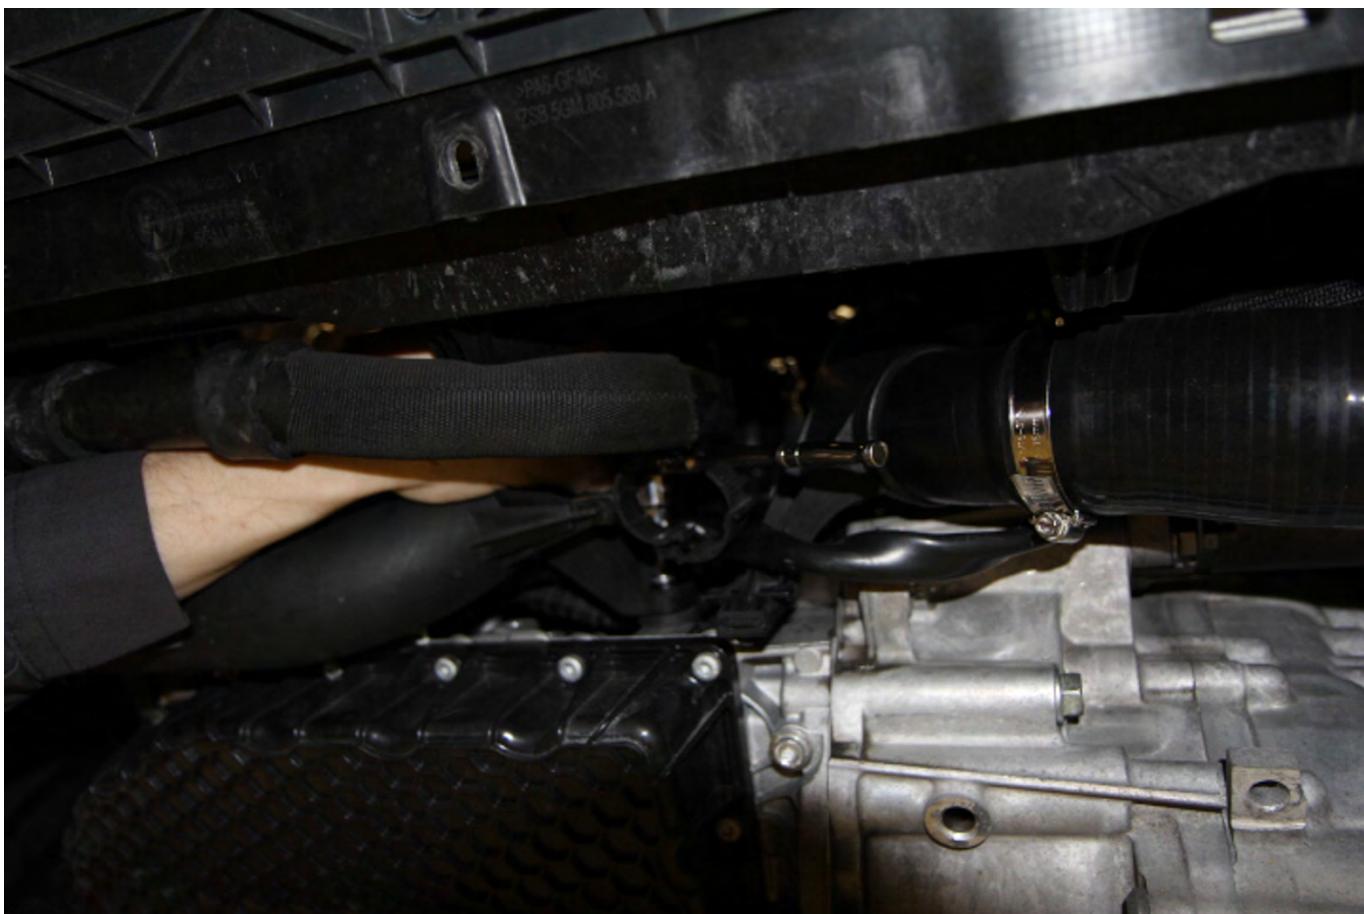

**Step 6 - Unclip the map sensor**



**Step 7 - Undo the silicon from throttle body**



**Step 8 - Remove the throttle pipe**



**Step 9** - Remove the map from the throttle pipe using T20 and transfer map to the new pipe




**Step 10 - Slide the clamp over the silicon**



**Step 11 - Slide the silicon over the throttle body**




**Step12** - Loosely thread the bolt for the bracket

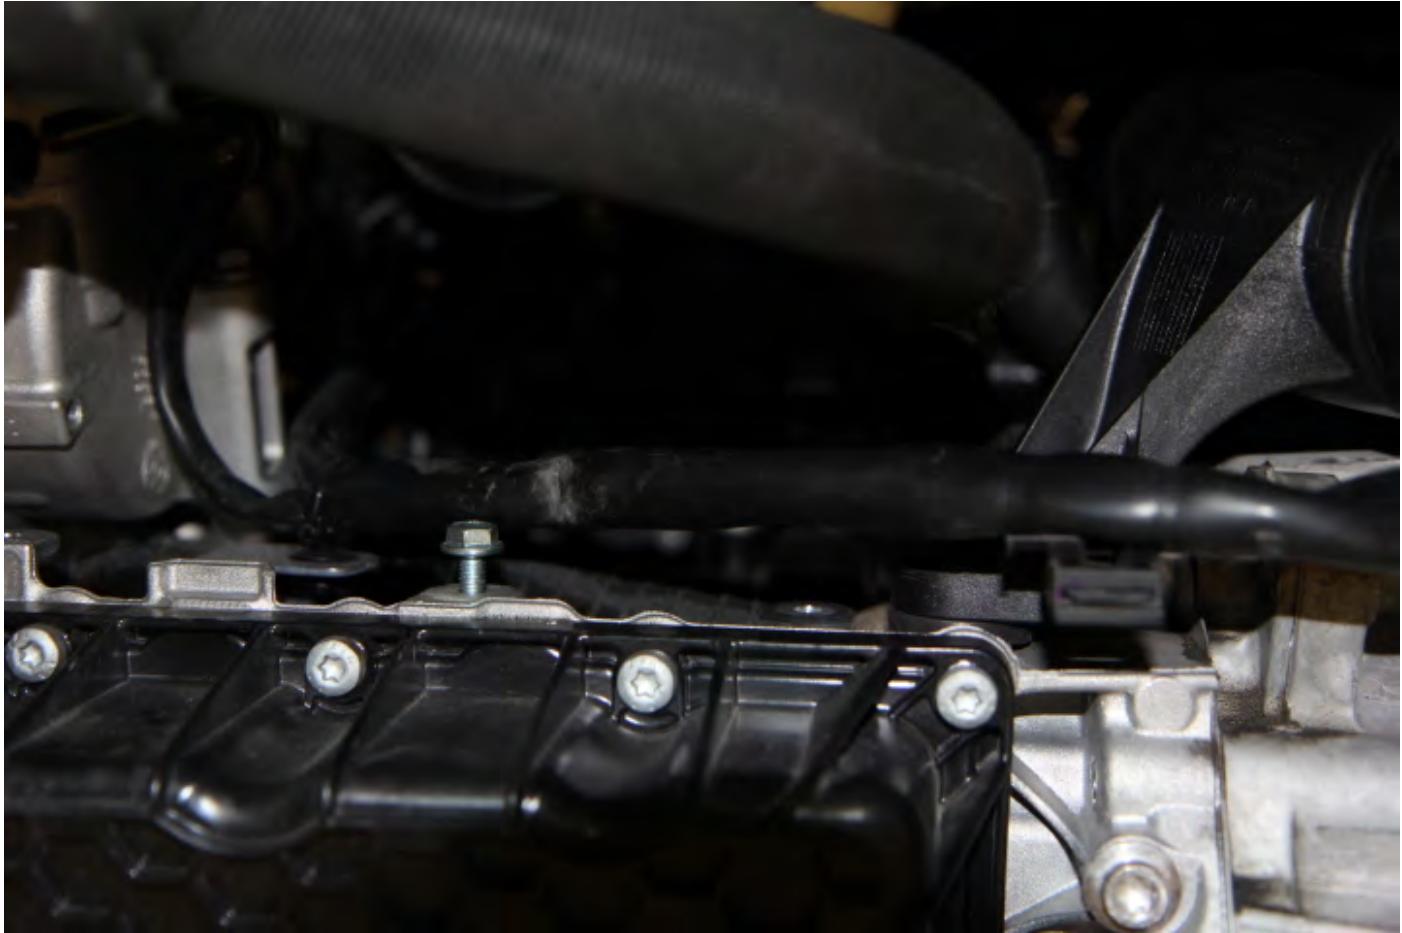

**Step 13** - Slide clamp over pipe and insert pipe into silicon




**Step 14** - Slide the bracket over the bolt

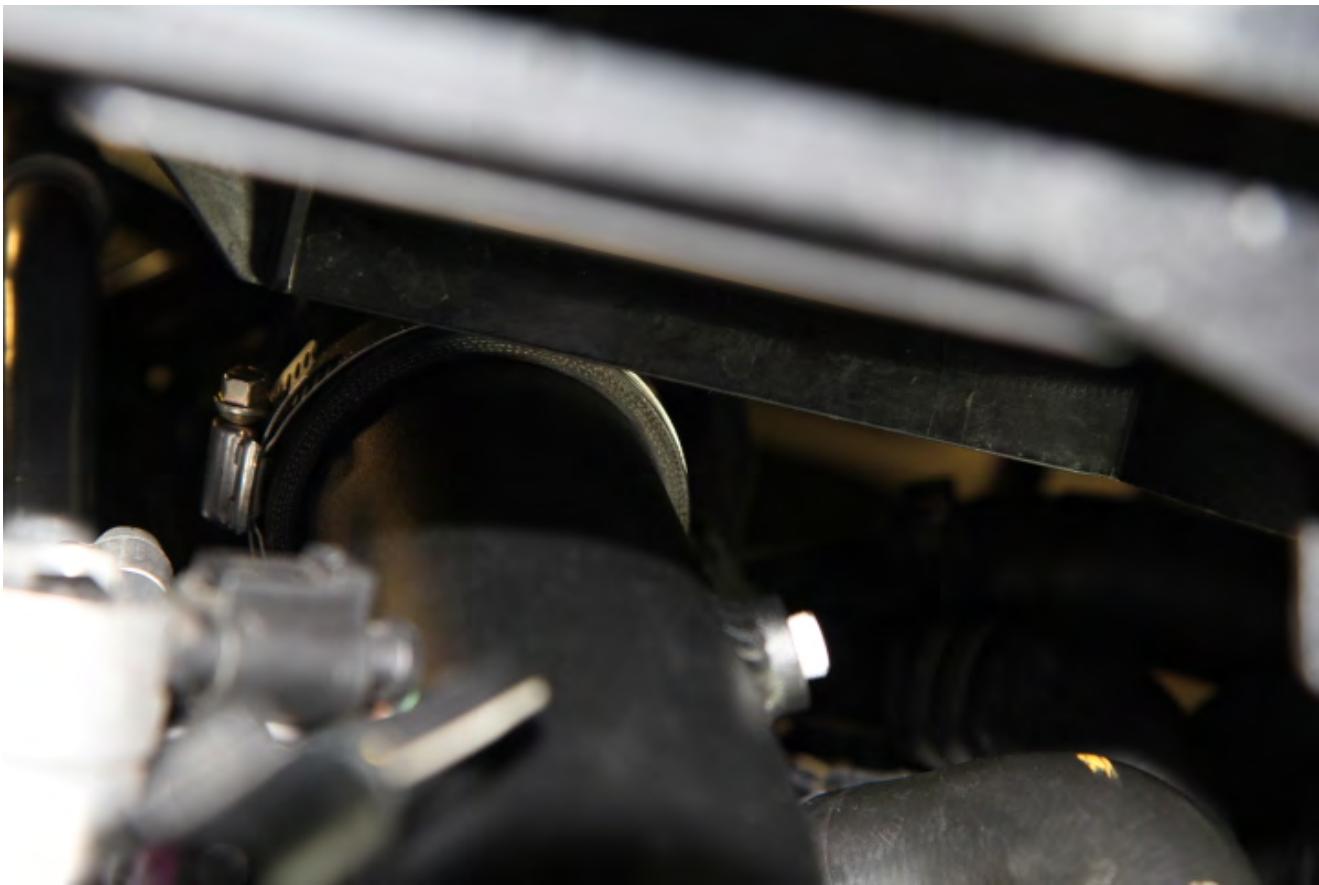


**Step 15** - Plugin the map sensor

**Step 16** - Tighten throttle body clamp

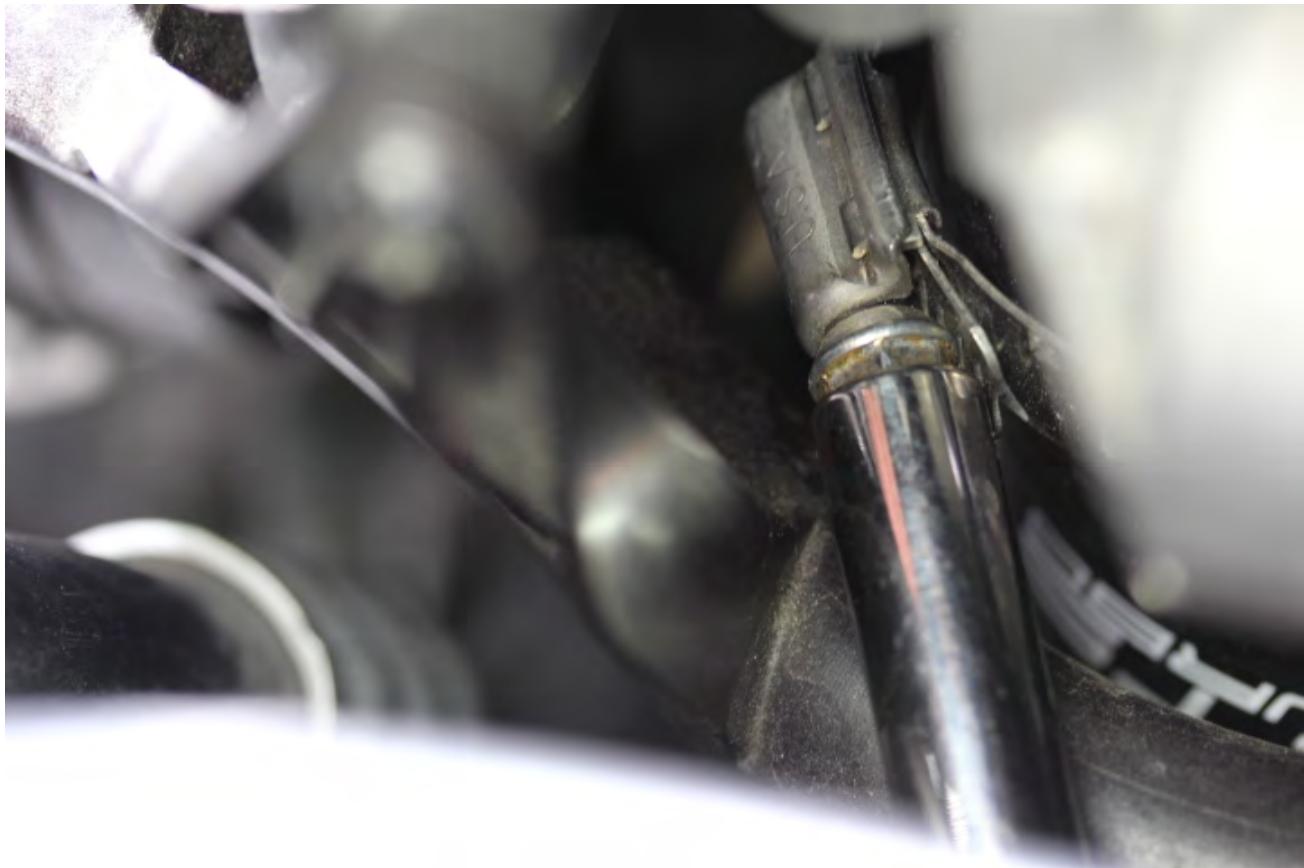

**Step 17 - Tighten the lower clamp**

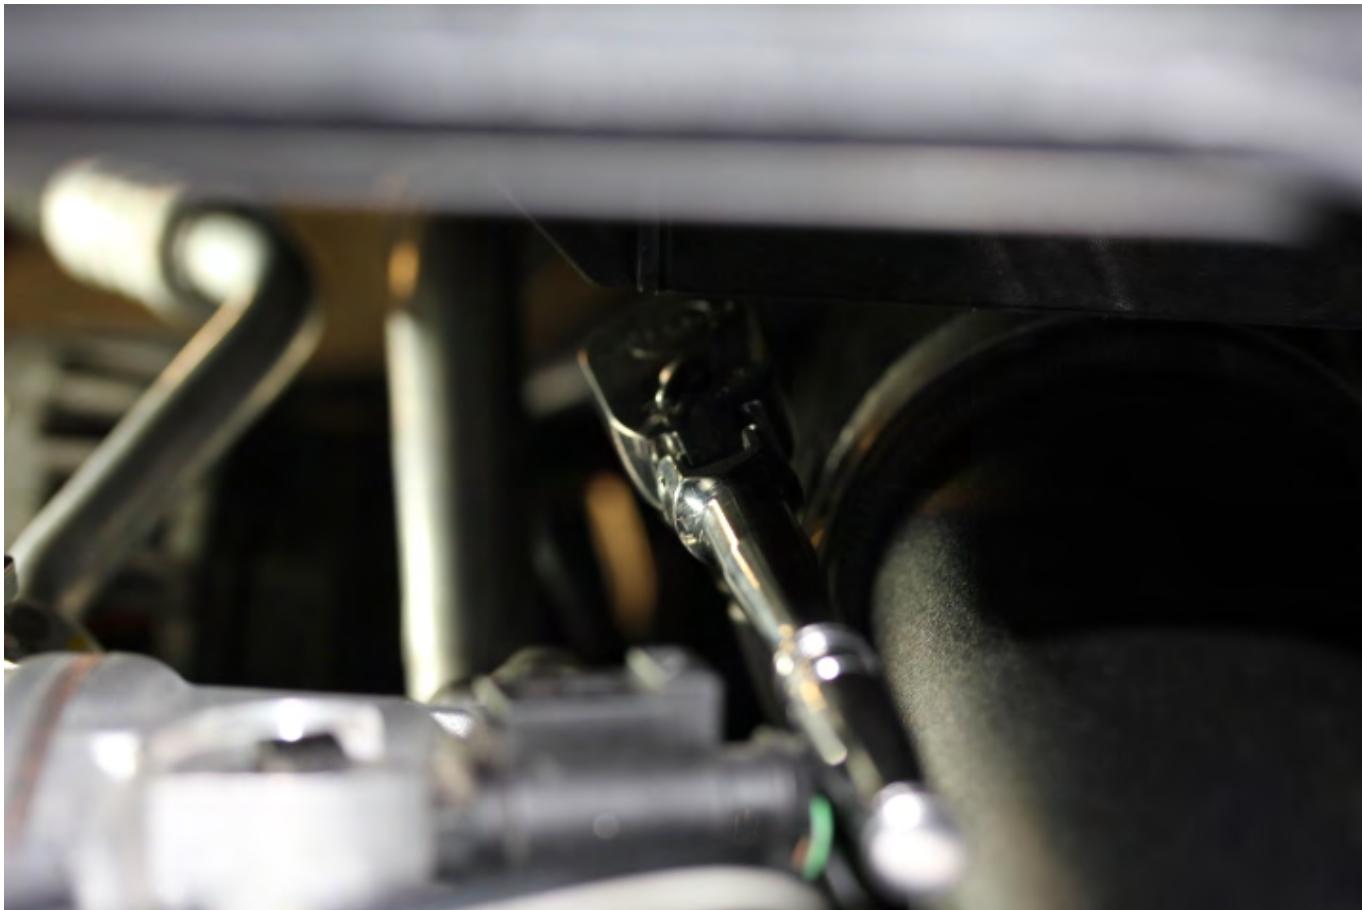

**Step 18 - Reinstall the intercooler silicon**



**Step 19** - Put the belly pan back



**CTS  
TURBO**

604.530.3092  
[www.ctsturbo.com](http://www.ctsturbo.com)  
#309-20630 Mufford Cre. Langley