



FM225BHP – VAG 1.8T de-resonated charge pipe



Tools needed

13mm socket

3/8 ratchet




Hose clamp driver

Philips head screw driver

1/ Undo the two Philips head clips and remove the engine cover.




2/ Remove the four hose clamps shown in the images below.

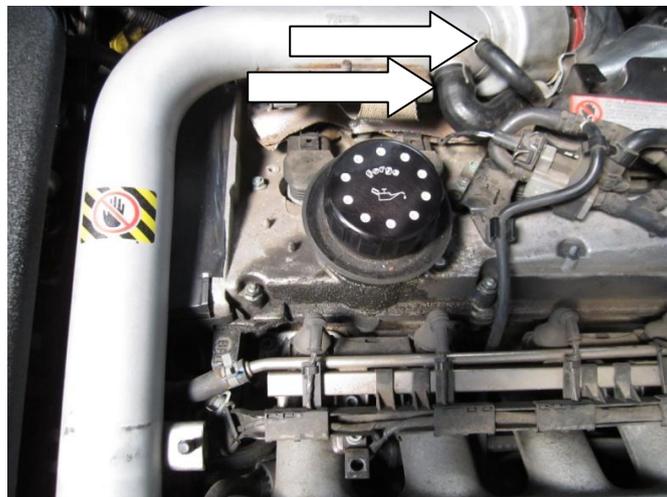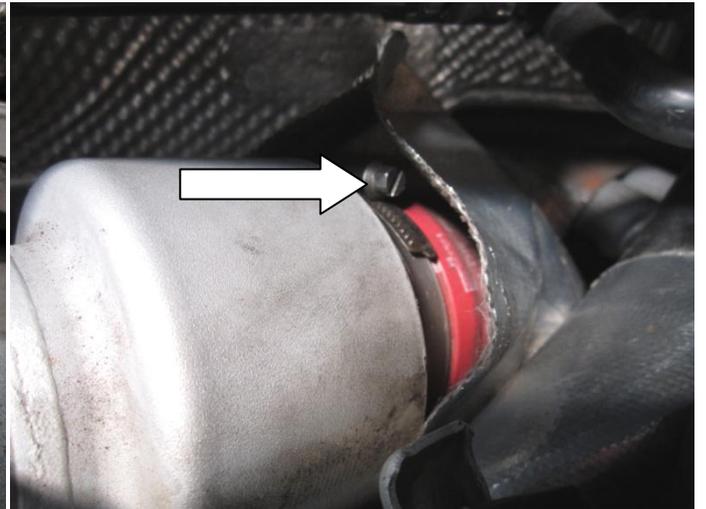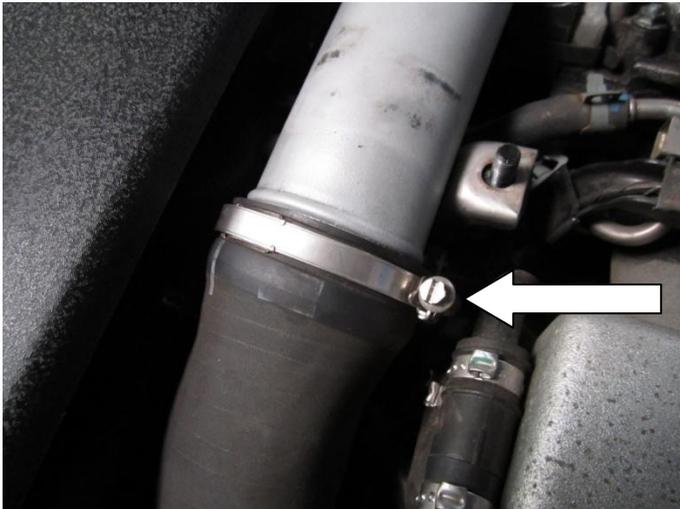


3 Undo the two 13mm nuts shown and remove the brackets.

The charge pipe can now be removed.

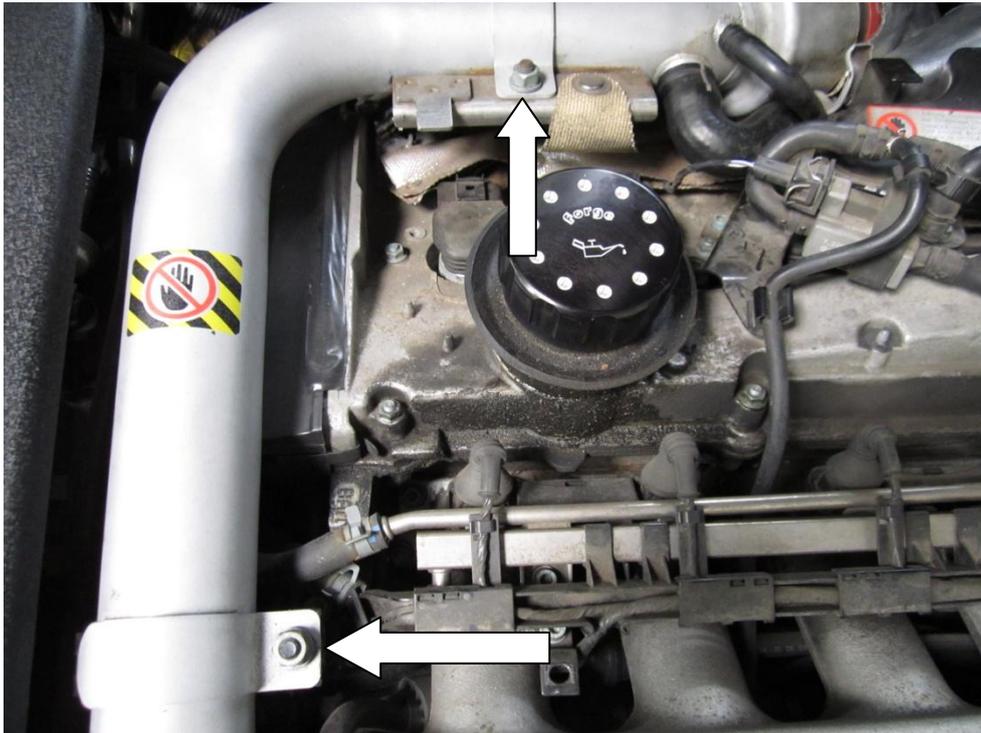

4/ Loosen off the hose clamp on the turbo hose **so that the hose can freely move round**. You may need to open the poppers on the heat shield.

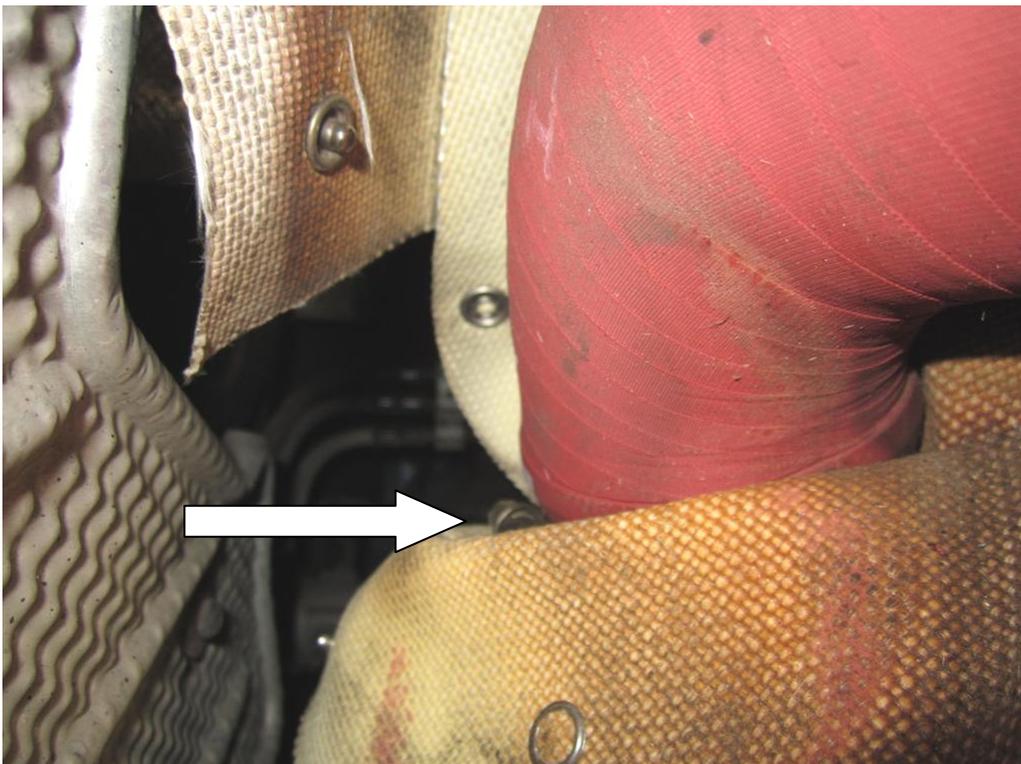

5/ Refit the new de-resonated charge pipe fitting the turbo end first then twisting it so that it fits perfectly in the locating brackets.

6/ Refit all of the hoses and tighten all of the hose clips.

7/Refit the engine cover and road test vehicle.



Thank you for buying Forge Motorsport products.

As always, with any questions or concerns about this product, please feel free to contact your local or

Preferred Forge Motorsport dealer/installer or you may contact us directly.

Forge Motorsport UK (+ 44) 1 452 380 999 / [info@forgemotorsport.co.uk](mailto:info@forgemotorsport.co.uk)

Forge Motorsport US (407) 447-5363 / [sales@forgemotorsport.com](mailto:sales@forgemotorsport.com)

