




## AUDI TT / S3 / LEON CUPRA R 1.8T CARBON CANISTER SYSTEM HOSE LOCATION.

Remove the engine cover and the water expansion tank cover using a large flat screwdriver.

This will reveal the hoses shown in the pictures below.

You will need a hose clamp tool to remove the hose clamps it is recommended that you use new hose clips when carrying out this modification.



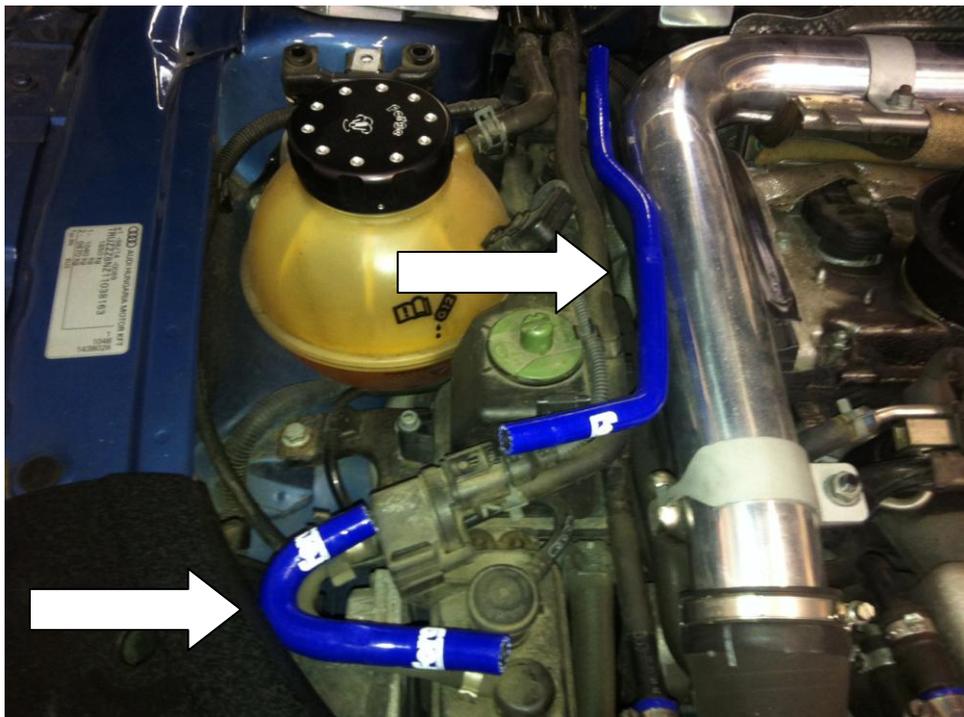

**Forge**  
MOTORSPORT

ENGINEERED FOR PERFORMANCE