

FMBGFK3 - Boost gauge fitting kit instructions

Please see below the location of where the boost gauge take off will be installed.

2.5 TTRS/RS3 Side of inlet manifold

VAG 1.8T / 2.0T Throttle body plastic pipe




1.2 TSI On top of inlet manifold

1.4 TSI On top of inlet manifold



Remove the two T25 Torx head screws (Allen head bolts TTRS) and remove the map sensor

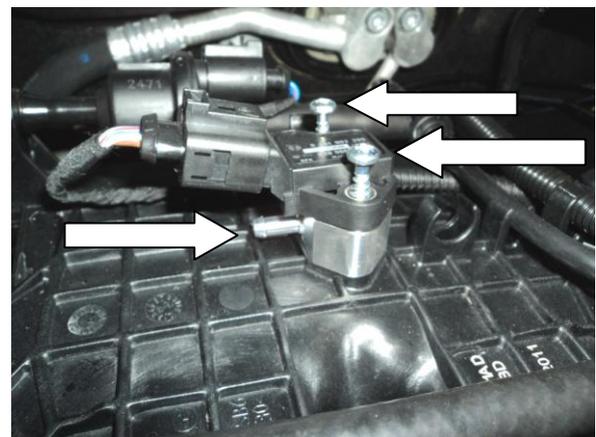

Fit the boost gauge take off using the longer screws provided. (Allen head bolts TTRS)
Then connect the vacuum tubing to the take off and route to the boost gauge(not supplied)

ENGINEERED FOR PERFORMANCE