



Boost Tap Fitting Instructions




Step 1. Remove the MAP sensor from the inlet manifold.

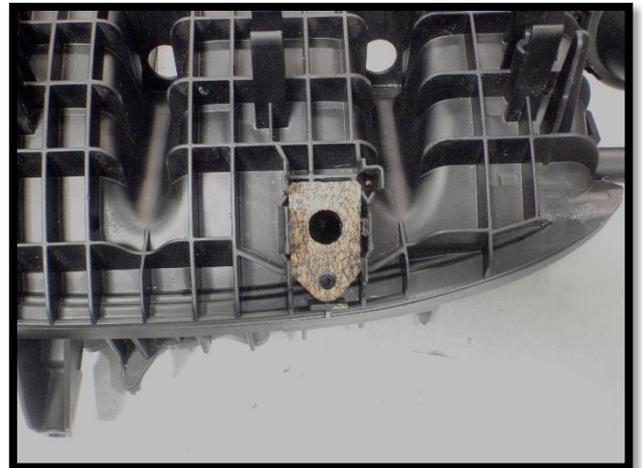

Step 2. Place the cork casket onto the inlet manifold.

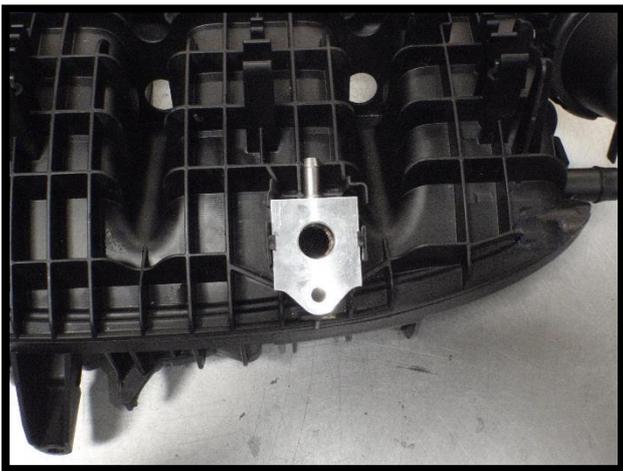

Step 3. Push down on the boost tap until it clicks into place and push on the vacuum hose.

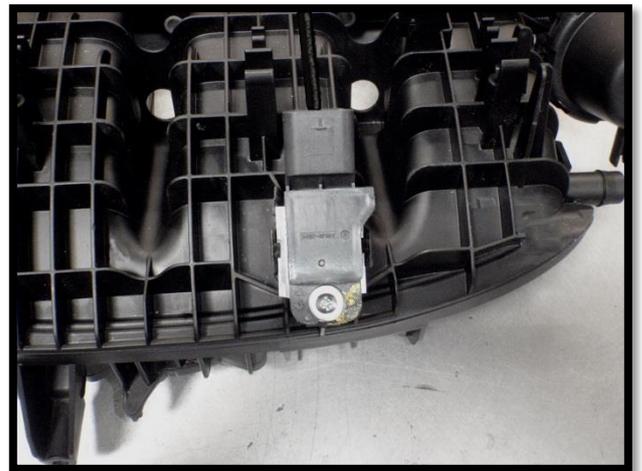

Step 4. Push the MAP sensor into the boost tap and using the screw and washer supplied in the kit tighten down.