


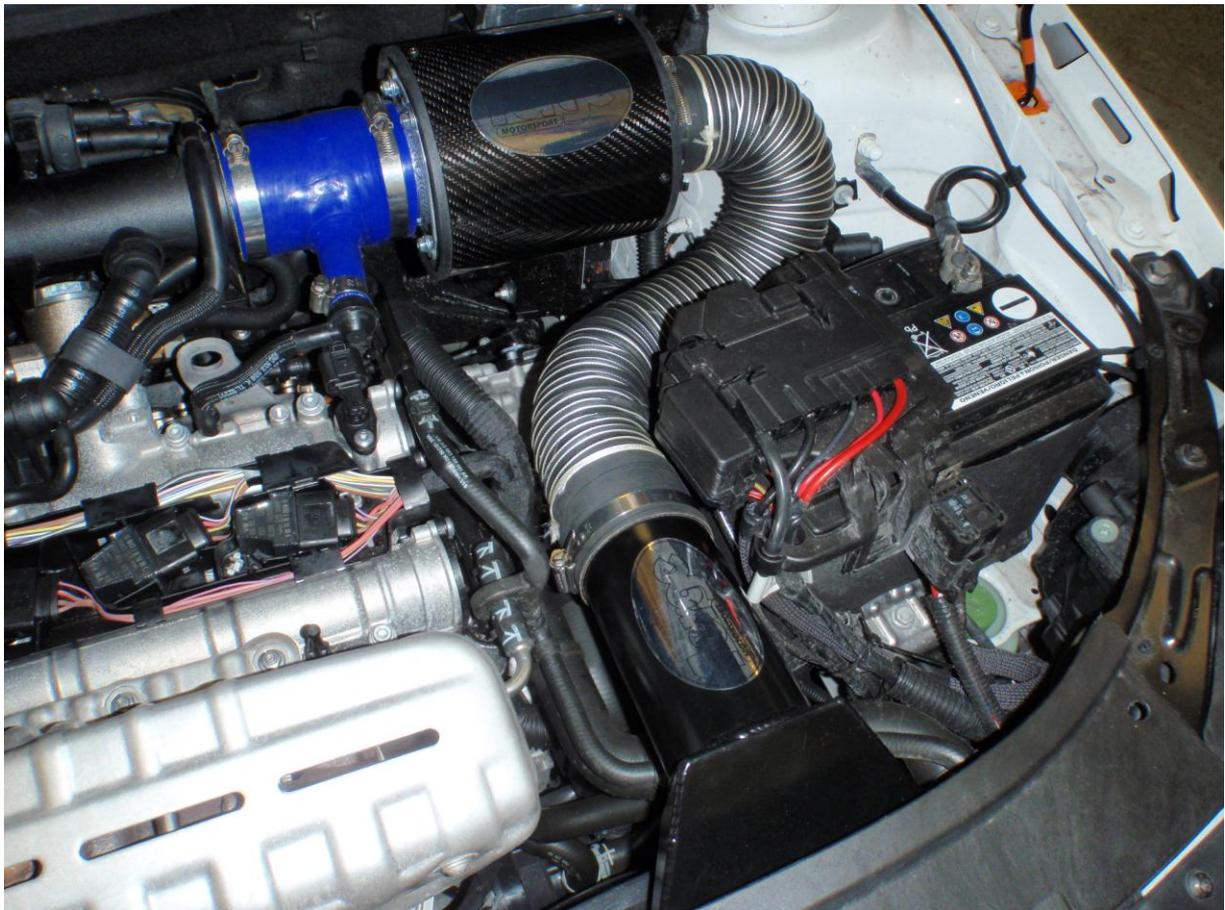

Skoda Fabia 1.4 Twin Charged Intake Installation



Tools needed:


7mm hose clamp driver

T30 screwdriver


T25 screwdriver

VAG ratchet hose clamp remover

1. Open the bonnet and remove the engine cover by grasping each leading of the cover and pulling sharply upwards to release it from the rubber grommets, then pull the cover towards you to remove it from the engine.

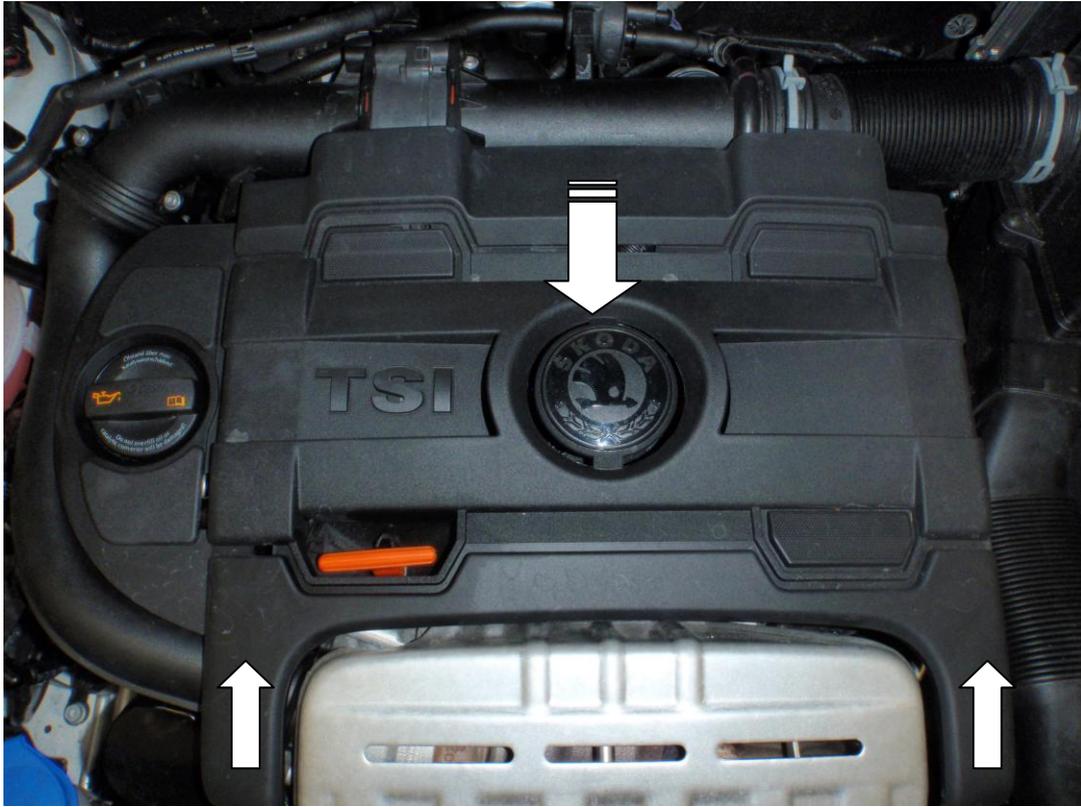

2. Using the ratchet hose clamp compressor, clamp the two metal hose clips as shown to remove the convoluted plastic inlet hose, then pull the breather fitting out of the rubber pipe attached to the inlet hose.

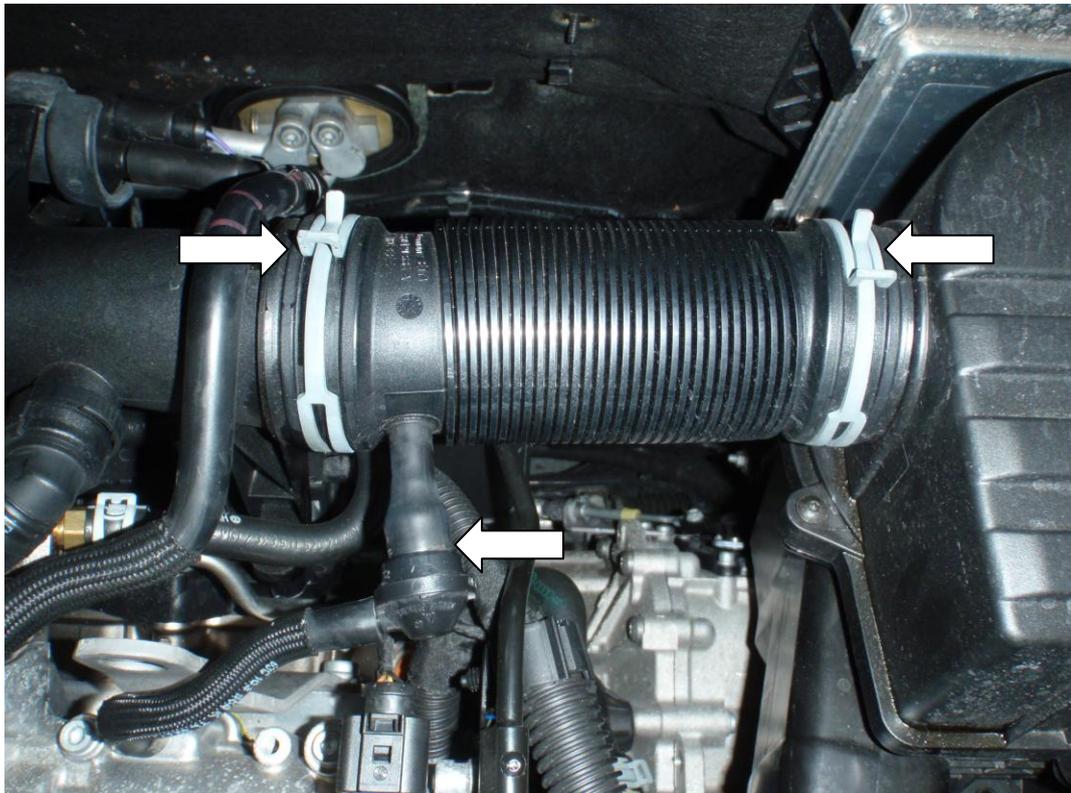

3. Undo the two T25 Torx screws holding the air scoop to the front slam panel.



4. Undo the T30 torx that is holding the air box down, pull the air box upwards holding the 2 leading edges to release it from its rubber mounts removing it from the car.



5. Attach the silicon hose to the intake hosing, then attach the breather fitting and intake, tightening the 3 hose clamps



6. Fit the cold air scoop using existing T25 screws from the original cold air scoop



7. Attach both ends of the cold air pipe to the cold air scoop and air filter using the hose clamps supplied.



Installation is now complete.

Thank you for using Forge Motorsport products



ENGINEERED FOR PERFORMANCE