






## FMPCVD1 INSTALLATION

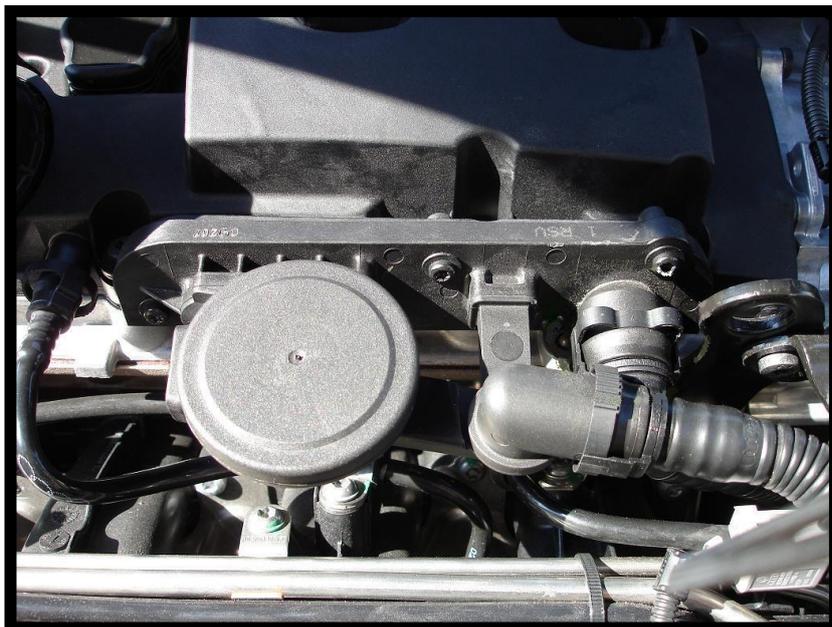

1. Unclip the breather pipes and undo the torx bolts, remove the PCV but keep to one side the rubber seal and torx bolts.

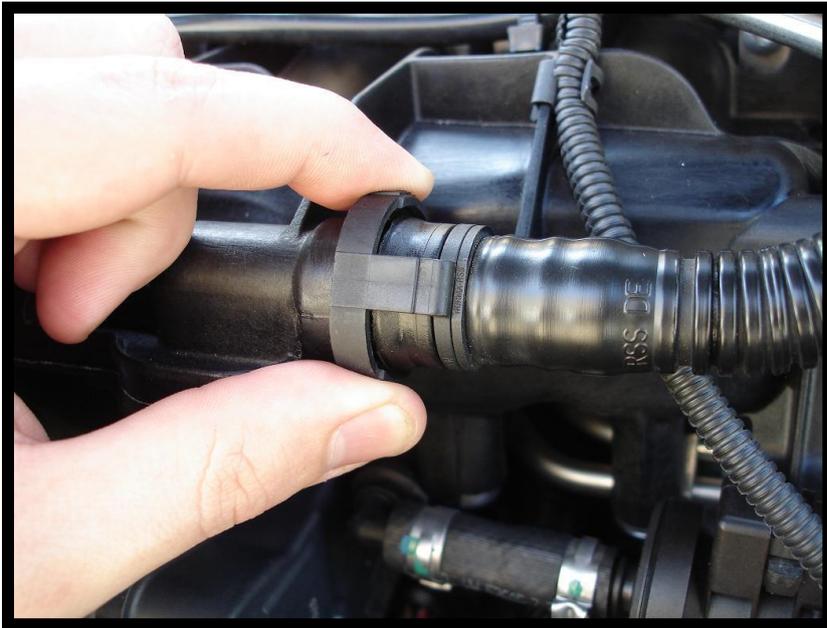

2. Unclip the breather pipe from the inlet manifold and remove.

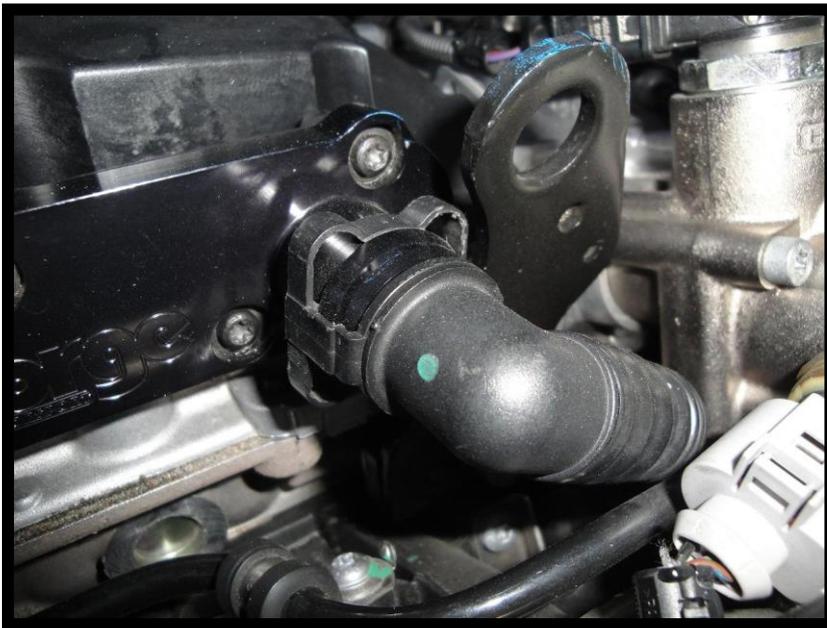

3. Attach the PCV delete with the OEM rubber seal and torx bolts and clip on the remaining breather pipe.



4. Attach the inlet manifold blanking cap with the plastic clip. Fully tighten the appropriate grub screws or boost gauge ports according to your needs. (We recommend applying a thread lock)