

Instruction Sheet



Front Radius Rod Bushing

Z5221

Suits: BMW E90

N.B: This instruction sheet should be used in conjunction with the workshop manual

1. Raise vehicle and safely support. Remove front wheels.
2. Un bolt radius arm mounting bolt and ball joint and remove arms.
3. Press/push out worn bushings, careful to safely support and not damage the arms.
4. Using a suitable press tool, press new bushings in arm. Lubricate bushing ID with the supplied grease and push the supplied tubes in position. Refer image below for castor arrangement
5. Tighten all bolts and carry out wheel alignment.
6. Re check after initial 100kms

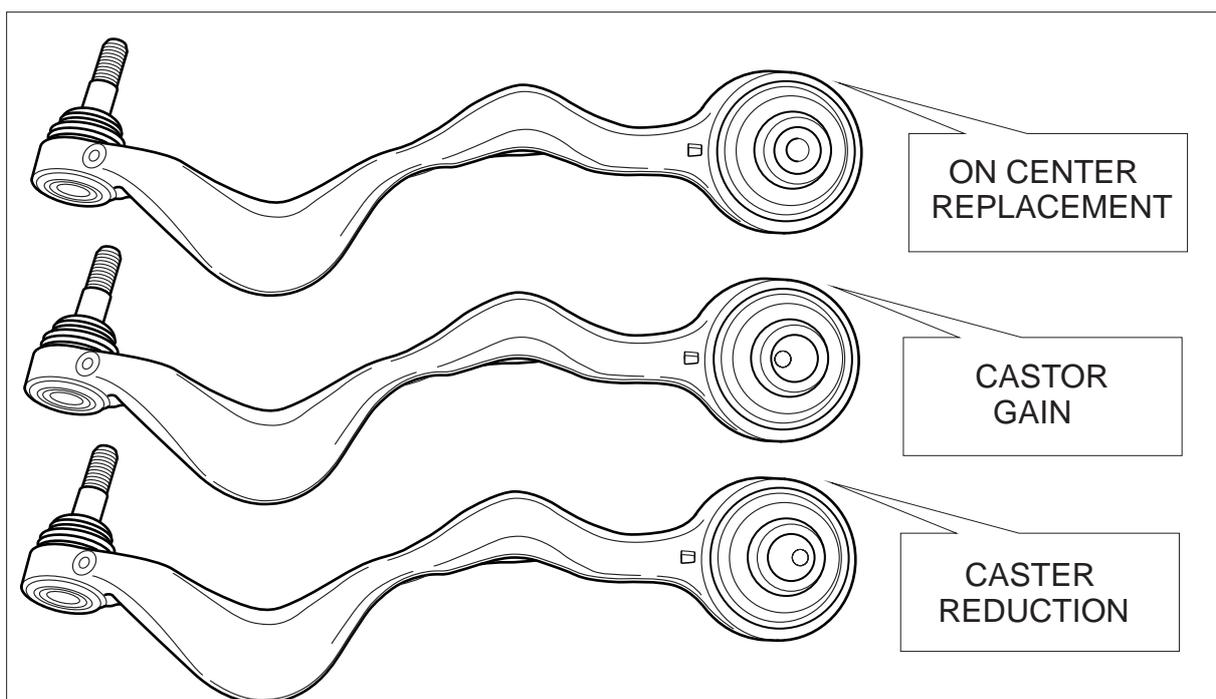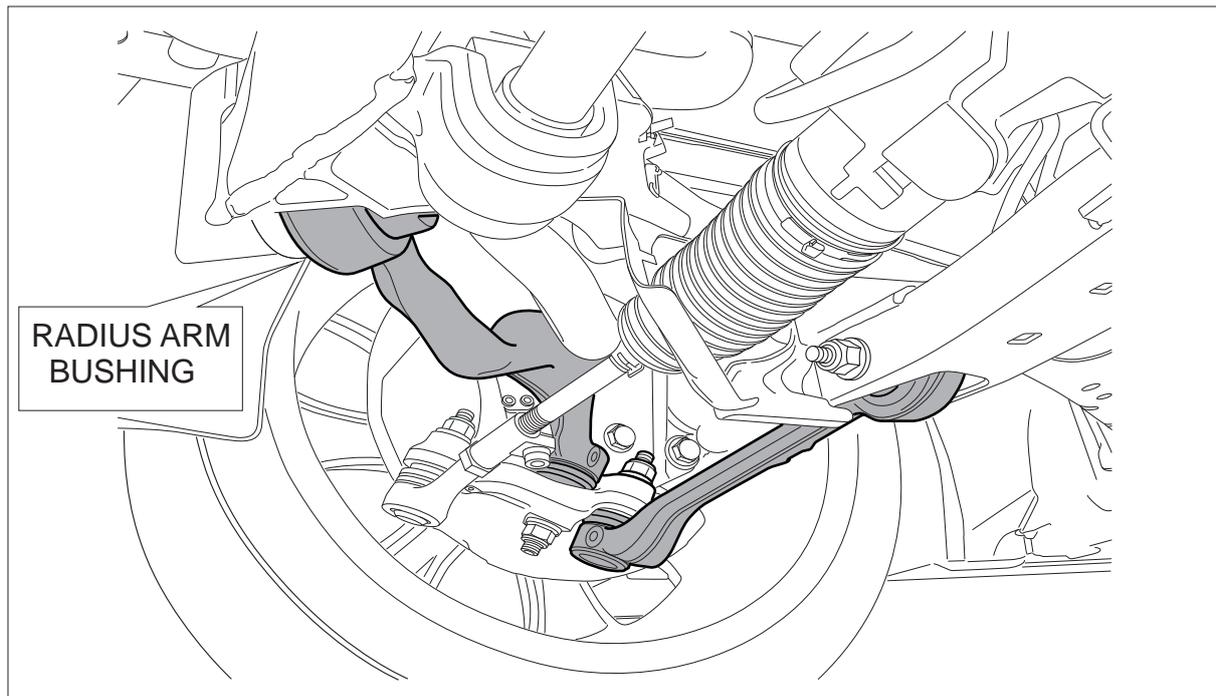

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.