

Fitting Instructions

Rear Differential Mount

Code: Z5206
Rev B

Application:

NISSAN 350Z 10/03 - 09

NISSAN 370Z 08 - ON

Always refer to current catalogue for complete application listing.

Contents:

4X VERTICAL MOUNT BUSHINGS
1X REAR HORIZONTAL MOUNT BUSHING
2X STEEL TUBES
1X GREASE

INSTRUCTIONS

Fig 1.



Fig 2.



1. Raise vehicle evenly and safely support.
2. Start by removing the rear swaybar then commence unbolting the drive shafts and tailshaft at the differential end. Ref fig2.
3. Move any cables/wiring aside prior to unbolting the 3 differential mounting points.
4. Using a suitable jack, support the differential, then unbolt and remove from subframe. Ref fig1.



Fig 3.

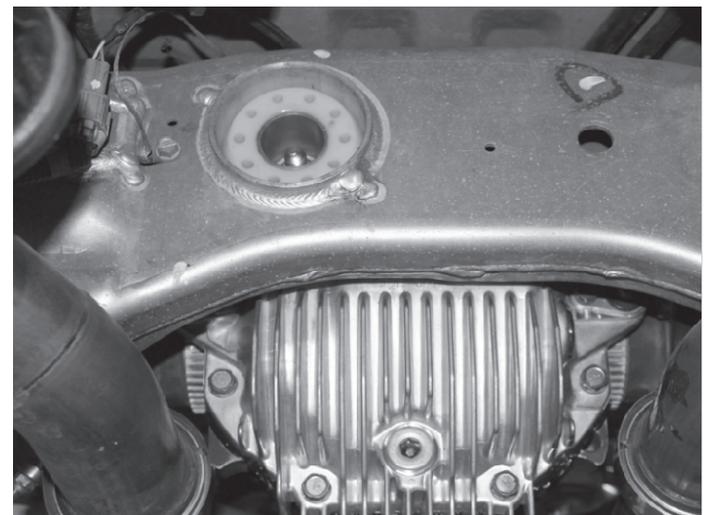


Fig 4.

5. Using a drill or Air-hacksaw, cut through the OE bushing rubber and outer shell then remove from differential and subframe.
 6. Push in position the 2 smaller vertical mount bushings from the top and the 2 larger vertical mount bushings from the bottom. Grease ID of bushings and push the 2 supplied tubes in position. Ref 3.
- Note - Re-use OE upper washer. The removal of this may cause drive-line vibration.**
7. Bolt up the rear horizontal as per fig 4. Lightly grease OD prior to install.
 8. Position differential back into the vehicles subframe, tighten all bolts as per OEM specification.
 9. Re check after intial 100kms travelled.

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.