



| | | | |
|--------------|--|-----------------|----------------------|
| Car | Audi TTS MK2 2.0 TFSI | Part No. | SAUC026 |
| Year | 2008-2014 | Fit Kits | 002FK |
| Notes | Where not supplied use original fittings. 690AU has a long swage which allows adjustment when fitting this product. | Features | Pipe Diameter:- 70mm |

Estimated Fitting Time: 4 Hours

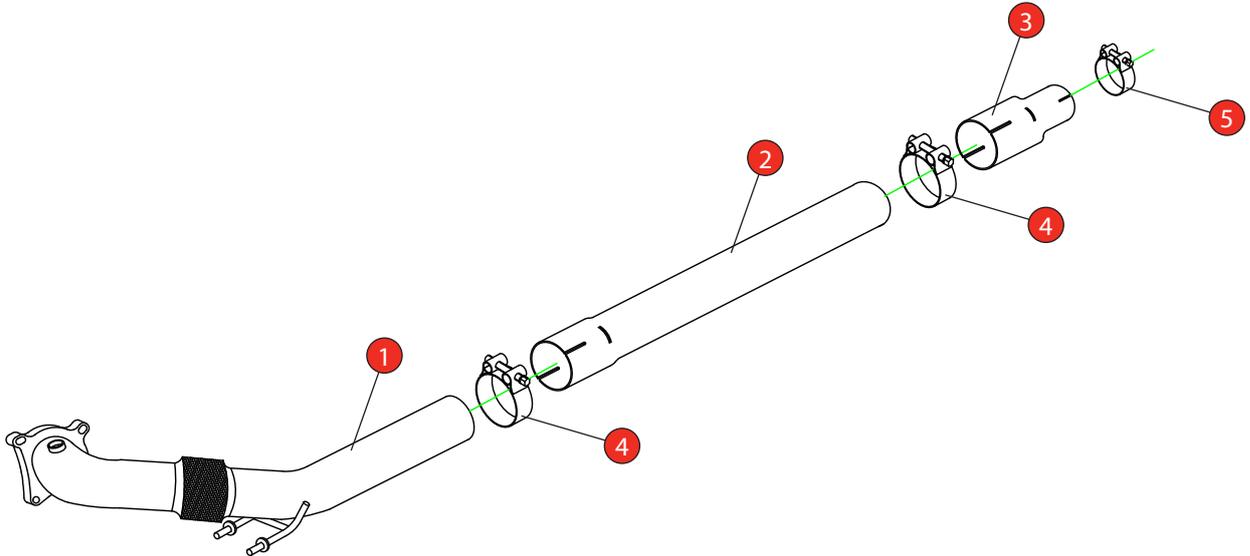

| NO. | PART NO. | DESCRIPTION | QTY |
|----------------|------------|--|-----|
| 1 | 421AU | De-cat Downpipe | 1 |
| 2 | 690AU | Front Link Pipe | 1 |
| Fit Kit | | | |
| 3 | AD76 | Adaptor (USE TO FIT TO O.E SYSTEM) | 1 |
| 4 | Z016.10063 | 72mm H/D Clamp | 2 |
| 5 | Z016.10001 | 59-63mm Clamp (USE TO FIT TO O.E SYSTEM) | 1 |

| | |
|------------|----------|
| E-MARK | N/A |
| DATE | 19/05/17 |
| ISSUE | 03 |
| AUTHORISED | M.Ydlibi |

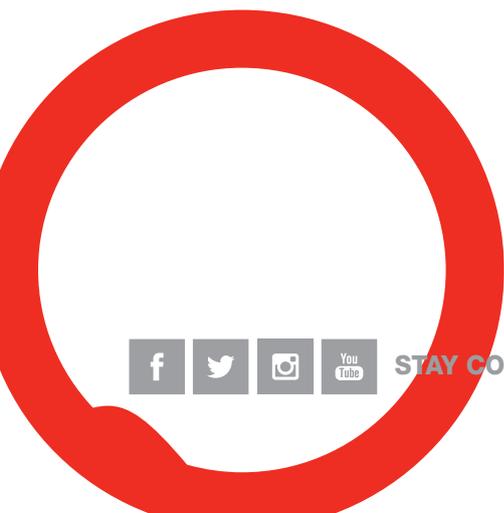NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


STAY CONNECTED TO RED POWER.