



Performance air filters
for road and race vehicles




STAB122XLI30N

Hyundai i30 N Induction Kit

Fitting Instructions

Removal of the Stock Intake

Step 1: Loosen the hose clamp on the intake pipework and remove the 3 bolts securing the airbox using a 10mm socket.

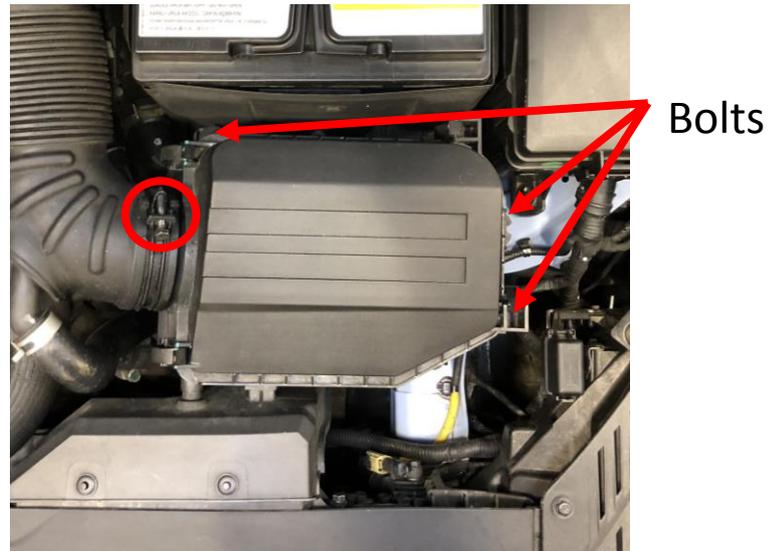

Step 2: Pull the hose off the left hand side of the airbox and remove airbox from the vehicle. The cold air feed at the base of the airbox will pop off when the airbox is lifted out.


Step 3: Remove the scoop by removing the two bolts securing the scoop to the slam panel using a 10mm socket. (Keep these bolts safe as they will be used to refit the mounting bracket).



Bolts

Fitting the ITG Induction Kit

Step 1: Remove grounding bolt using 12mm socket, feed the wire through the slot in the base of the mounting bracket and re mount using the existing bolt and the two bolts removed from the slam panel. Tighten the two bolts at the base of the mounting bracket to the chassis leg and leave the top bolt loose so that the heatshield has some movement.

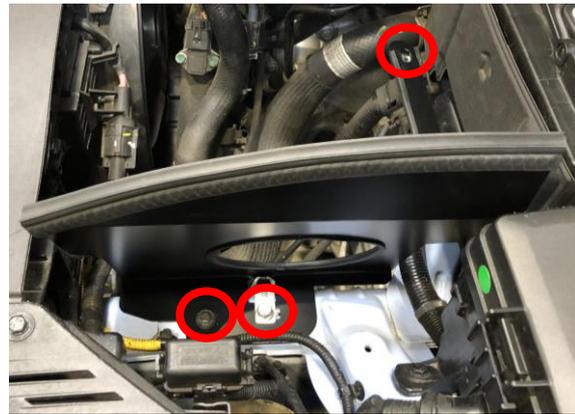

Step 2: Fit the airbox by inserting the inlet side into the hole in the mounting bracket then insert the filter neck into the existing intake hose, this can be secured by tightening the hose clamp. The Final bolt can then be tightened.

